# OnCell 5004/5104 Series User's Manual

**First Edition, February 2009**

***www.moxa.com/product***

© 2009 Moxa Inc. All rights reserved.
Reproduction without permission is prohibited.

# OnCell 5004/5104 Series User's Manual

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

## Copyright Notice

Copyright © 2009 Moxa Inc.
All rights reserved.
Reproduction without permission is prohibited.

## Trademarks

MOXA is a registered trademark of Moxa Inc.
All other trademarks or registered marks in this manual belong to their respective manufacturers.

## Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.

Moxa provides this document "as is," without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Moxa assumes no responsibility for its use or for any infringements on the rights of third parties that may result from its use.

This product may include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

## Technical Support Contact Information

**www.moxa.com/support**

Moxa Americas:
Toll-free: 1-888-669-2872
Tel: +1-714-528-6777
Fax: +1-714-528-6778

Moxa China (Shanghai office):
Toll-free: 800-820-5036
Tel: +86-21-5258-9955
Fax: +86-10-6872-3958

Moxa Europe:
Tel: +49-89-3 70 03 99-0
Fax: +49-89-3 70 03 99-99

Moxa Asia-Pacific:
Tel: +886-2-8919-1230
Fax: +886-2-8919-1231

# Table of Contents


**Chapter 1 Introduction ..... 1-1**
Overview ..... 1-2
Package Checklist ..... 1-2
Product Features ..... 1-3
Product Specifications ..... 1-3

**Chapter 2 Getting Started ..... 2-1**
Panel Layout ..... 2-2
OnCell 5004 ..... 2-2
OnCell 5104 ..... 2-3
DIN-Rail, and Rack Mounting ..... 2-4
Wall or Cabinet Mounting ..... 2-4
DIN-Rail Mounting ..... 2-4
Connecting the Hardware ..... 2-5
SIM Card Installation ..... 2-5
Connecting the Power ..... 2-5
Connecting the I/O Port ..... 2-6
Connecting to the Network ..... 2-6
LED Indicators ..... 2-6
Reset Button ..... 2-7

**Chapter 3 Initial IP Address Configuration ..... 3-1**
Static and Dynamic IP Addresses ..... 3-2
Factory Default IP Address ..... 3-2
Configuration Options ..... 3-2
OnCell Search Utility ..... 3-2
Web Console ..... 3-2
Telnet Console ..... 3-2
Serial Console ..... 3-7

**Chapter 4 Web Console Configuration ..... 4-1**
Accessing the Web Console ..... 4-2
Web Console Navigation ..... 4-3
Basic Settings ..... 4-3
Device Settings ..... 4-3
Time Settings ..... 4-4
Network Settings ..... 4-5
LAN Settings ..... 4-5
LAN Port Configuration ..... 4-5
Cellular WAN Settings ..... 4-6
Ethernet WAN Settings ..... 4-7
DNS Settings ..... 4-8
DHCP Settings ..... 4-9
Auto IP Report ..... 4-10
Advanced Network Settings ..... 4-10
Firewall Settings ..... 4-10
WAN IP Filter ..... 4-11
Route Table ..... 4-12

**Chapter 5 System Management Settings ..... 5-1**

Misc. Network Settings ..... 5-2
SNMP Agent Settings ..... 5-2
DDNS Configuration ..... 5-3
Auto Warning Settings ..... 5-3
Event Settings ..... 5-3
E-mail Alert ..... 5-4
SNMP Trap ..... 5-5
SMS Alert ..... 5-5
Maintenance ..... 5-6
Console Settings ..... 5-6
PING Test ..... 5-6
System Log Settings ..... 5-7
Firmware Upgrade ..... 5-7
Configuration Import/Export ..... 5-8
Load Factory Defaults ..... 5-9
Change Password ..... 5-9
Certificate ..... 5-10
Ethernet SSL Certificate Import ..... 5-10
Certificate/Key Delete ..... 5-10
System Monitoring ..... 5-10
Network Connections ..... 5-10
Network Statistics ..... 5-11
Routing ..... 5-11
DHCP Client List ..... 5-12
Internet Sessions List ..... 5-12
System Log ..... 5-12
Dout State ..... 5-13
Din and Power Status ..... 5-13
Save Configuration ..... 5-13
Restart ..... 5-14
Restart System ..... 5-14

**Chapter 6 OnCell Search Utility ..... 6-1**
Installing Search Utility ..... 6-2
Configuring OnCell Search Utility ..... 6-4

**Appendix A Default Settings ..... A-1**

# 1

# Introduction

The OnCell 5004/5104 series of cellular routers use a WAN connection to allow you to access your network from virtually anywhere within the operating range of your WAN network. There are currently two models in the OnCell 5004/5104 series of cellular routers: OnCell 5004 and OnCell 5104. The main differences between the models are the mechanical design and I/O support.

The following topics are covered in this chapter:

- **Overview**
- **Package Checklist**
- **Product Features**
- **Product Specifications**

# Overview

The OnCell 5004 and OnCell 5104 are high-performance industrial grade cellular routers that allow up to 4 Ethernet-based devices to simultaneously use a single cellular data account for primary or backup network connectivity to remote sites and devices. Both products provide the functionality of a cellular router, firewall, and switch in one device. The difference between the OnCell 5004 and OnCell 5104 is that the OnCell 5104 comes with a built-in relay output that can be configured to indicate the priority of events when notifying or warning engineers in the field, and the two digital inputs allow you to connect basic I/O devices, such as sensors, to the cellular network. The OnCell 5004 can be placed on a desktop or wall-mounted, whereas the OnCell 5104 has an IA design and can be attached to a DIN-rail. Both products use 12 to 48 VDC power inputs with a screw-on connector for greater reliability, and the Ethernet port comes with 1.5 KV magnetic isolation protection to keep your system safe from unexpected electrical discharges.

# Package Checklist

Each OnCell 5004/5104 serial cellular router is shipped in a separate box with standard accessories. In addition, several optional accessories can be ordered separately. When you receive your shipment, please check the contents of the box carefully, and notify your Moxa sales representative if any of the items are missing or appear to be damaged.

OnCell 5004/5104 series cellular routers are shipped with the following items:

***Standard Accessories***

- Rubber SMA antenna
- Rubber stand (OnCell 5004 series only)
- Wallmount Kit (OnCell 5004 series only)
- Din-Rail Kit (OnCell 5104 series only)
- Terminal block (screw type)
- Document and Software CD
- Product warranty statement
- Quick Installation Guide

***Optional Accessories***

- DC Power Supply (screw-on)
- DC Power Supply (standard)
- Power Jack to Terminal Block Cable
- Antennas (impedance = 50 ohms):
  ANT-CQB-AHSM-00-3m: Omni 0dBi/10cm, magnetic SMA quad-band antenna, 3 m
  ANT-CQB-AHSM-03-3m: Omni 3dBi/25cm, magnetic SMA quad-band antenna, 3 m
  ANT-CQB-AHSM-05-3m: Omni 5dBi/37cm, magnetic SMA quad-band antenna, 3 m

# Product Features

All models in the OnCell 5004/5104 series have the following features:

- Quad-band 900/1800, 850/1900 MHz GSM/GPRS
- Can connect up to 4 10/100BaseT(X) devices
- Redundant power (1 power jack; 1 terminal block) (OnCell 5004 only)
- Industrial primary and backup wireless WAN connectivity
- 2 digital inputs and 1 relay output (OnCell 5104 only)

# Product Specifications

| | OnCell 5004 | OnCell 5104 |
|---|---|---|
| **Cellular Interface** | | |
| Standards | GSM/GPRS | |
| Quad-band Options | 850/900/1800/1900 MHz | |
| GPRS Multi-slot | Class 10 | |
| GPRS Terminal Device | Class B | |
| GRRS Coding Schemes | CS1 to CS4 | |
| **WAN Interface** | | |
| Number of Ports | 1 | |
| Ethernet | 10/100M（RJ45） | |
| 1.5 KV Magnetic Isolation Protection | ✓ | |
| **LAN Interface** | | |
| Number of Ports | 4 | |
| Ethernet | 10/100M（RJ45） | |
| 1.5KV Magnetic Isolation Protection | ✓ | |
| **SIM Interface** | | |
| Number of SIMs | 2 | |
| SIM Control | 3 V | |
| **I/O Interface** | | |
| Alarm Contacts | -- | 1 |
| Digital Inputs | -- | 2 |
| **Software** | | |
| Network Protocols | UDP/TCP, SNTP, ICMP, DDNS, DHCP/BOOTP, PPPoE, PPP, DNS, Relay, HTTPS, Telnet | |

| | | |
|---|---|---|
| Router/Firewall | NAT, port forwarding, routing | |
| Authentication | Local user-name and password | |
| Security | IP filtering | |
| **Physical Characteristics** | | |
| Housing | Aluminum (IP30) | |
| Weight | 505 ± 5 g | 645 ± 5 g |
| Dimensions | 158 x 103 x 34 mm | 160 x 103 x 50 mm |
| **Environmental Limits** | | |
| Operating temperature | -30 to 55°C (-22 to 131°F), 5 to 95% RH | |
| Storage Temperature | -40 to 75°C (-40 to 167°F) | |
| **Regulatory Approvals** | | |
| Safety | UL (UL60950) | |
| Radio | FCC Part 22H, FCC Part 24E, EN301 489-1, EN301 489-7 EN301 511 | |
| EMC | CE: EN55022 Class A / EN55024, FCC: FCC part 15 subpart B, Class A, EN61000-4-2 (ESD) Level 4, EN61000-4-3 (RS) Level 3, EN61000-4-4 (EFT) Level 4, EN61000-4-5 (Surge) Level 3, EN61000-4-8 Level 3, EN61000-4-12 Level 3 | |
| **Reliability** | | |
| Warranty | 5 years (see www.moxa.com/warranty for details) | |

# 2

# Getting Started

This chapter covers the hardware installation of the OnCell 5004/5104. Software installation is covered in the next chapter.

The following topics are covered in this chapter:

- **Panel Layout**
  - OnCell 5004
  - OnCell 5104
- **DIN-Rail, and Rack Mounting**
  - Wall or Cabinet Mounting
  - DIN-Rail Mounting
- **Connecting the Hardware**
  - SIM Card Installation
  - Connecting the Power
  - Connecting the I/O Port
  - Connecting to the Network
  - LED Indicators
  - Reset Button

# Panel Layout

## OnCell 5004

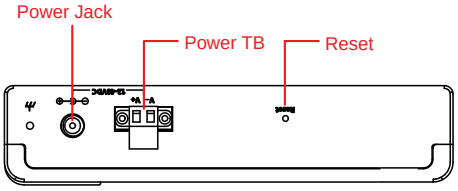


Top View

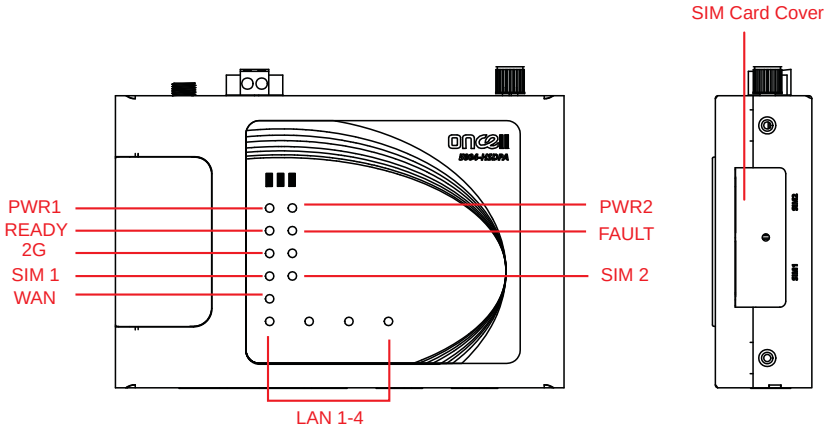


Front View

Side View

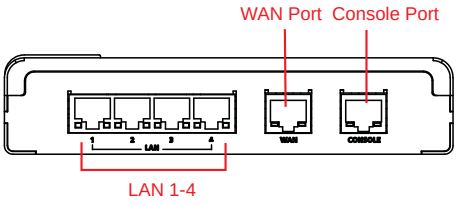


Rear View

# OnCell 5104

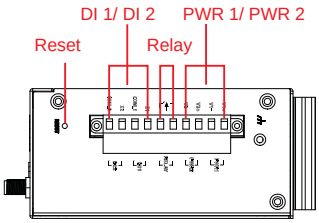


Top View

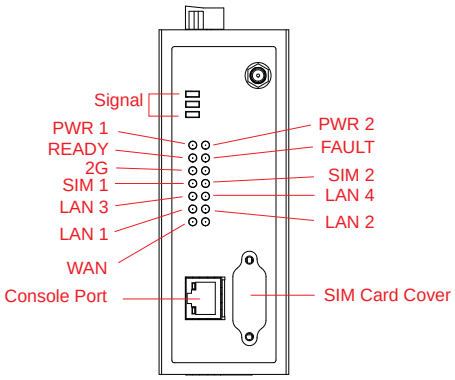


Front View

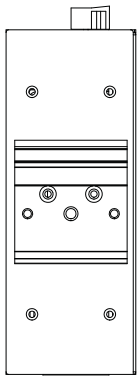

Back View

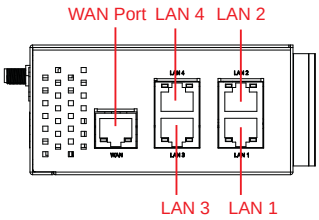


Bottom View

Left Side

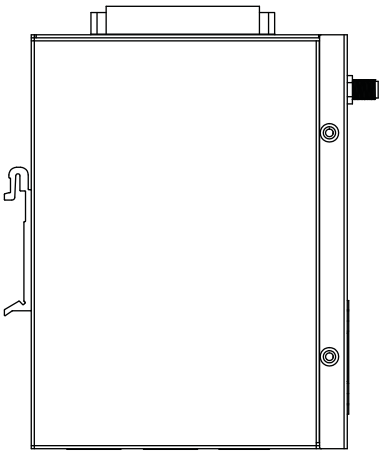

Right Side

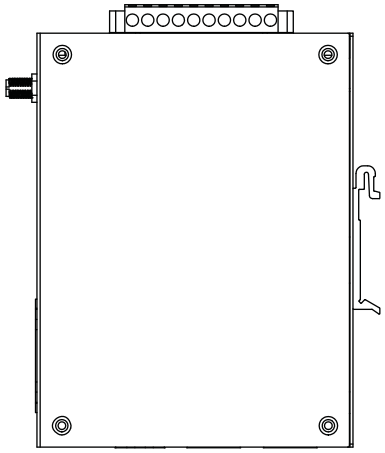

# DIN-Rail, and Rack Mounting

## Wall or Cabinet Mounting

The OnCell 5004 device servers have built-in "ears" for attaching the device server to a wall or the inside of a cabinet. We suggest using two screws per ear to attach the device servers to a wall or the inside of a cabinet. The heads of the screws should be less than 6.0 mm in diameter, and the shafts should be less than 3.5 mm in diameter, as shown in the figure at the right.

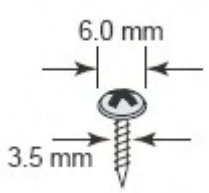


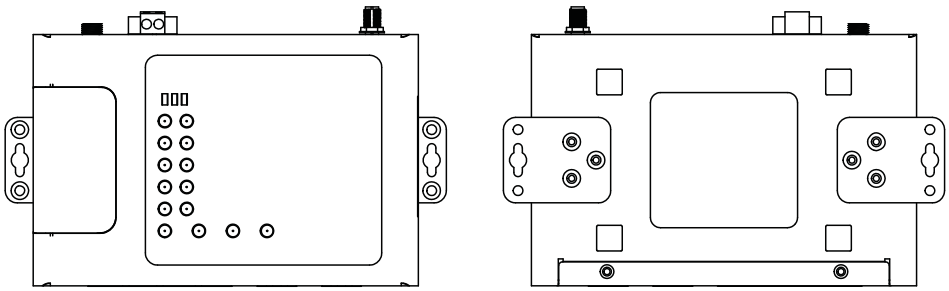

## DIN-Rail Mounting

DIN-rail attachments can be purchased separately to attach the OnCell 5104 to a DIN-rail. When the snapping the attachments to the DIN-rail, make sure that the stiff metal springs are at the top.

Right Side Back View

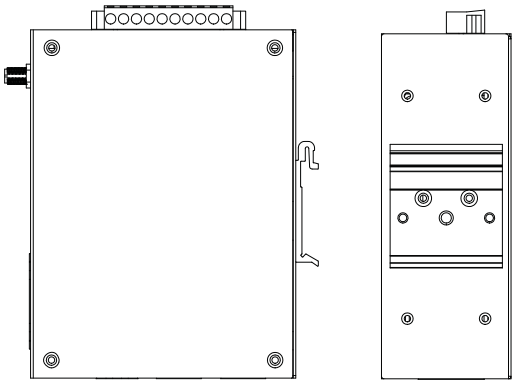

# Connecting the Hardware

This section describes how to connect the OnCell 5004/5104 cellular IP-modem to a host PC or Ethernet devices for first time testing purposes. We cover SIM card Installation, Connecting the Power, Connecting the I/O Port, Connecting to the Network, LED Indicators, and Reset Button.

## SIM Card Installation

In order to protect the SIM card, the SIM card slot is located inside the OnCell 5004/5104's casing. You will need to unscrew and remove the outer SIM card cover before installing or removing the SIM card.

**OnCell 5004**

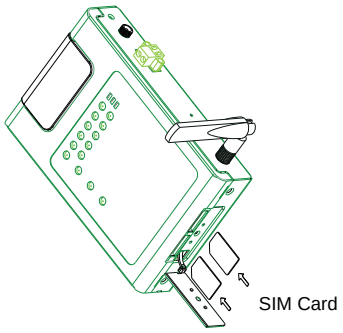


**OnCell 5104**

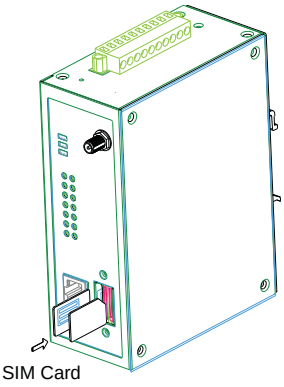


ATTENTION

The SIM LEDs on the front panel will be illuminated once GPRS is connected.

## Connecting the Power

The dual power inputs that connect to the 4-pin power terminal block (2 terminals per power input) can be used to connect the OnCell 5104 to a variety of field power sources that support 12 to 48 VDC. The OnCell 5004 have 1 power jack and 1 terminal block for connecting the power. After connecting the power wire to the OnCell 5004/5104's terminal block or power jack, the "PWR" LED will glow a solid green color to indicate that the system is ready.

## Connecting the I/O Port

The OnCell 5104 has six terminals on the terminal block for the I/O ports, with 4 terminals used for each input, and 2 terminals used for the output.

**Digital Input**

Digital ON and OFF determine which power input is used:

- +13 to +30 V for state "1" (On)
- -30 to -3 V for state "0" (Off)

**Digital Output:** 1 relay output with current carrying capacity of 1 A @ 24 VDC.

## Connecting to the Network

Connect one end of the Ethernet cable to the OnCell 5004/5104's 10/100M Ethernet port and the other end of the cable to the Ethernet network. If the cable is properly connected, the OnCell 5004/5104 will indicate a valid connection to the Ethernet as follows:

- The Ethernet LED glows a solid green when connected to a 100 Mbps Ethernet network.
- The Ethernet LED glows a solid orange when connected to a 10 Mbps Ethernet network.
- The Ethernet LED flashes when Ethernet packets are being transmitted or received.

## LED Indicators

The LED indicators on the front panel of the OnCell 5004/5104 are described in the following table.

| LED Name | LED Color | LED Function |
|---|---|---|
| PWR 1 | Green | DC Power has been activated |
| | Off | Power is off, or power error condition exists. |
| PWR 2 | Green | DC Power has been activated |
| | Off | Power is off, or power error condition exists. |
| 2G | Amber | 2G is connected |
| | Off | 2G is disconnected |
| SIM 1 | Amber | Cellular is connected, SIM 1 is in use |
| | Off | Cellular is disconnected, SIM 1 is not in use |
| SIM 2 | Amber | Cellular is connected, SIM 2 is in use |
| | Off | Cellular is disconnected, SIM 2 is not in use |
| Ready | Green | **Steady on:** Software Ready.<br>**Blinking slowly (once per sec.):** The OnCell has been located by the OnCell Search Utility. |
| | Off | Power is off, or is booting up. |
| Fault | Red | **Steady on:** Booting up, or IP fault.<br>**Blinking slowly (once per sec.):** Cannot get an IP address from the DHCP server |
| | Off | Power is off, or there is no error condition. |

| LED Name | LED Color | LED Function |
|---|---|---|
| LAN 1-4 | Green | **Steady on:** Software Ready.<br>**Blinking slowly (once per sec.):** Data transmission |
| | Off | Power is off, or is booting up. |
| Signal (3 LEDs) | Green | Signal Level (at least 2 LEDs must illuminated for data to be transmitted successfully) |

ATTENTION

**2G LED:**

The cellular connection is connected if both PIN and APN codes are correct. The 2G LED will be ON if the PIN code is correct, even if the APN is wrong. To determine if the APN code is correct, please refer to the web console's overview page to see whether or not the WAN IP address was obtained.

## Reset Button

Press and hold the Rest button for 5 sec to load factory defaults: Use a pointed object, such as a straightened paper clip or toothpick to press the reset button. This will cause the Ready LED to blink on and off. The factory defaults will be loaded once the Ready LED stops blinking (default LAN IP: 192.168.127.254).

# 3

# Initial IP Address Configuration

When setting up the OnCell 5004/5104 for the first time, the first thing you should do is configure its IP address. This chapter introduces the different methods that can be used.

The following topics are covered in this chapter:

- **Static and Dynamic IP Addresses**
- **Factory Default IP Address**
- **Configuration Options**
  - OnCell Search Utility
  - Web Console
  - Serial Console

# Static and Dynamic IP Addresses

Determine whether your OnCell 5004/5104 needs to use a static IP address or dynamic IP address (either DHCP or BOOTP application).

- ***If your OnCell 5004/5104 is used in a static IP environment***, you must assign a specific IP address using one of the tools described in this chapter.
- ***If your OnCell 5004/5104 is used in a dynamic IP environment***, the IP address will be assigned automatically from over the network. In this case, set the IP configuration mode to DHCP or BOOTP.

ATTENTION

Consult your network administrator on how to reserve a fixed IP address for your OnCell 5004/5104 in the MAC-IP mapping table when using a DHCP Server or BOOTP Server. For most applications, you should assign a fixed IP address to your OnCell 5004/5104.

# Factory Default IP Address

The OnCell 5004/5104 is configured with the following default private IP address:

**192.168.127.254**

Note that IP addresses that begin with "192.168" are referred to as private IP addresses. Devices configured with a private IP address are not directly accessible from a public network. For example, you would not be able to ping a device with a private IP address from an outside Internet connection. If your application requires sending data over a public network, such as the Internet, your OnCell 5004/5104 will need a valid public IP address, which can be leased from a local ISP.

# Configuration Options

## OnCell Search Utility

You may configure your OnCell 5004/5104 with the bundled OnCell Search Utility for Windows. Refer to *Chapter 6, OnCell Search Utility*, for details on how to install and use OnCell Search Utility.

## Web Console

You may configure your OnCell 5004/5104 using a standard web browser. Refer to *Chapter 4, Using the Web Console*, for details on how to access and use the OnCell 5004/5104 web console.

## Telnet Console

Depending on how your computer and network are configured, you may find it convenient to use network access to set up your OnCell 5004/5104's IP address. This can be done using Telnet.

ATTENTION

Figures in this section were taken from the OnCell 5004/5104's Telnet console.

1. From the Windows desktop, select **Start → Run**, and then type the following content in the **Run** window: **telnet 192.168.127.254**. If your IP address is different from the default setting, use your IP address instead. Click **OK**.

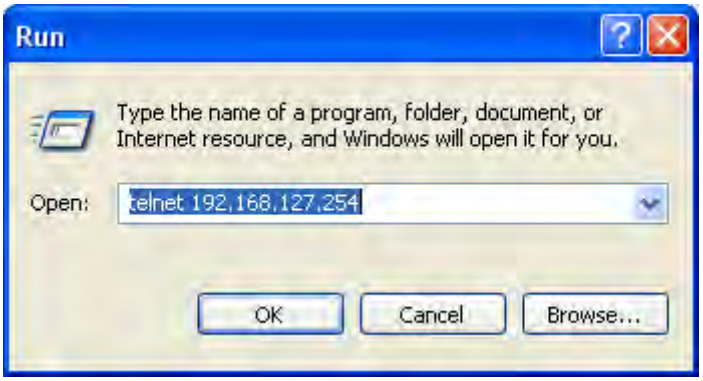


2. The console terminal type selection is displayed, as shown below. Enter **1** for **ansi/vt100**, and then press **ENTER** to continue.

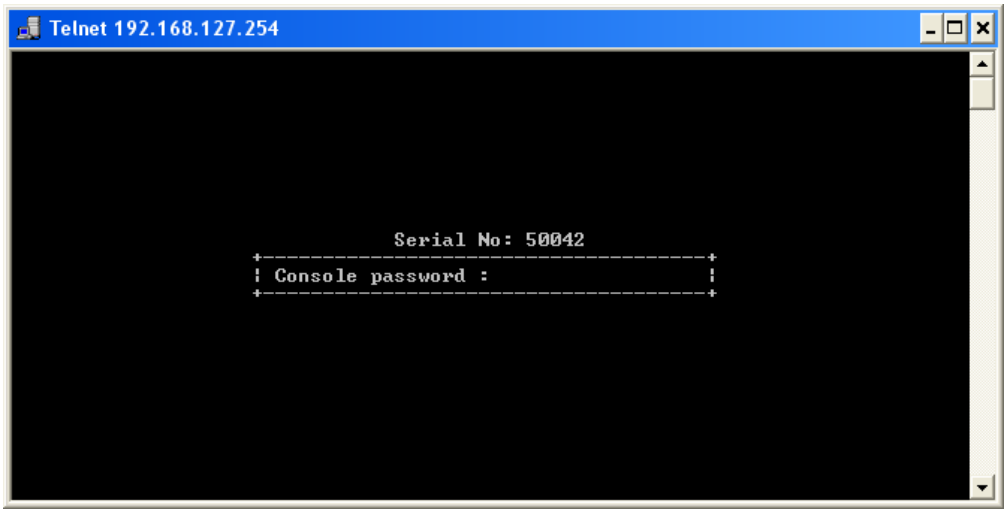

3. The following window will only appear if the OnCell 5004/5104 is password protected. Enter the console password if you are prompted to do so, and then press **ENTER**.

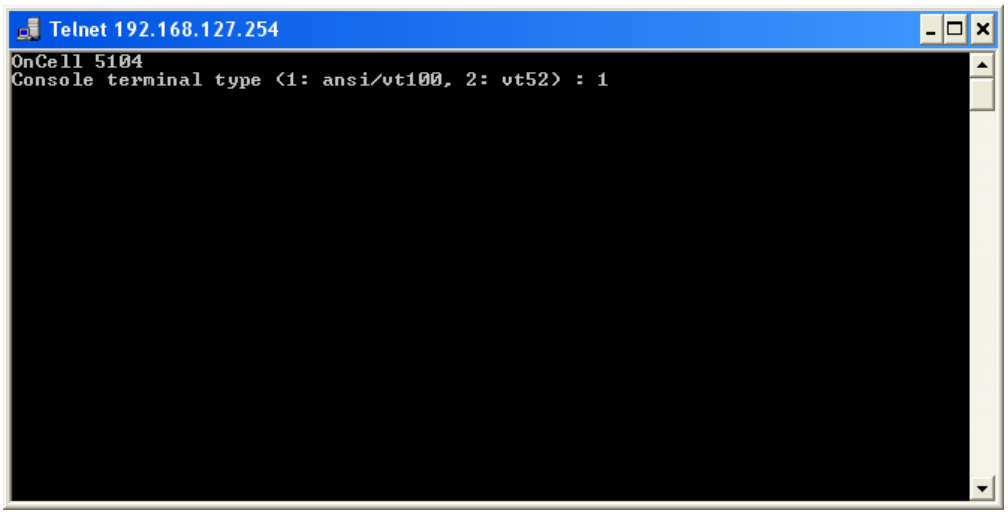


4. Press **N** or use the arrow keys to select **Network**, and then press **ENTER**.

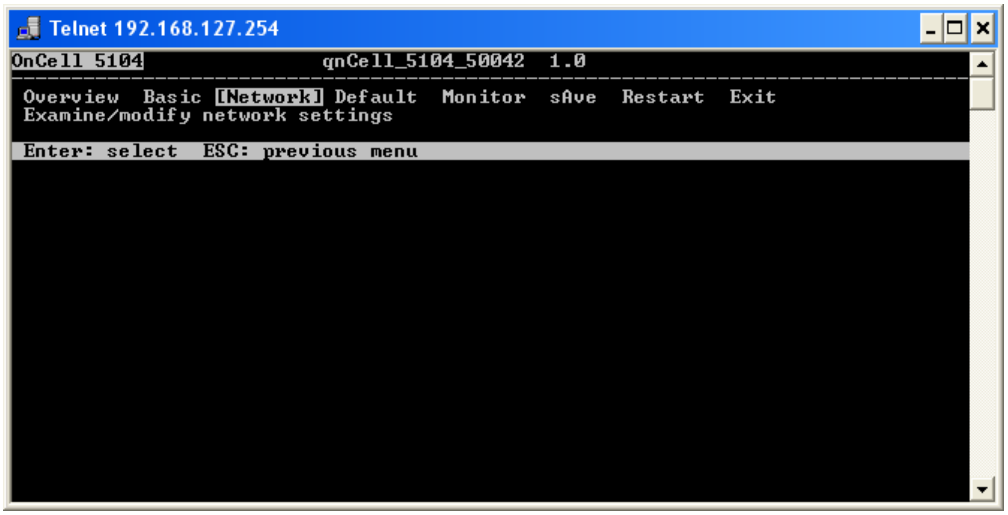
Telnet 192.168.127.254
OnCell 5104 qnCell_5104_50042 1.0
Overview Basic [Network] Default Monitor sAve Restart Exit
Examine/modify network settings
Enter: select ESC: previous menu

5. Press **L** or use the arrow keys to select **LAN**, and then press **ENTER**.

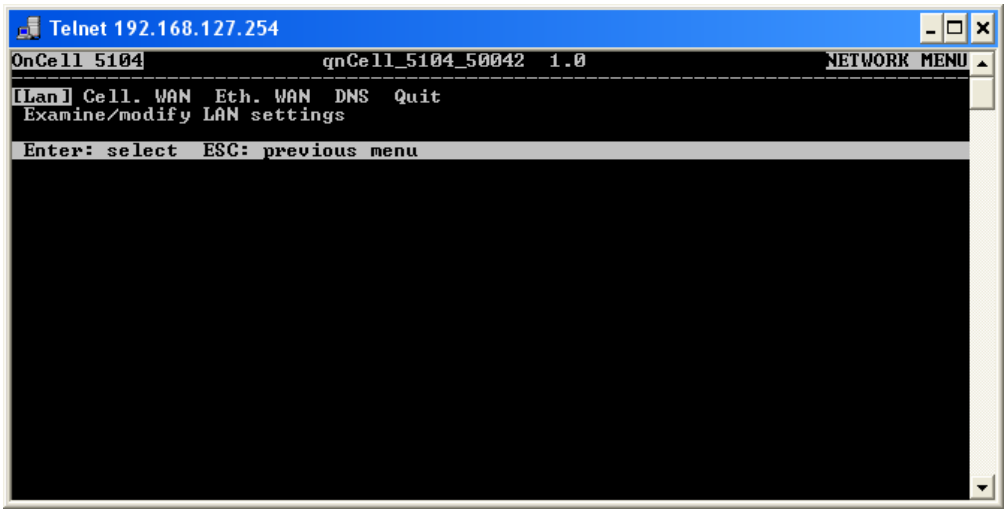
Telnet 192.168.127.254
OnCell 5104 qnCell_5104_50042 1.0 NETWORK MENU
[Lan] Cell. WAN Eth. WAN DNS Quit
Examine/modify LAN settings
Enter: select ESC: previous menu

6. Use the arrow keys to move the cursor to **IP address**. Use the **DELETE**, **BACKSPACE**, or **SPACE** keys to erase the current IP address, and then type in the new IP address and press **ENTER**. Note that if you are using a dynamic IP configuration (BOOTP, DHCP, etc.), you will need to go to the **IP configuration field** and press **ENTER** to select the appropriate configuration.

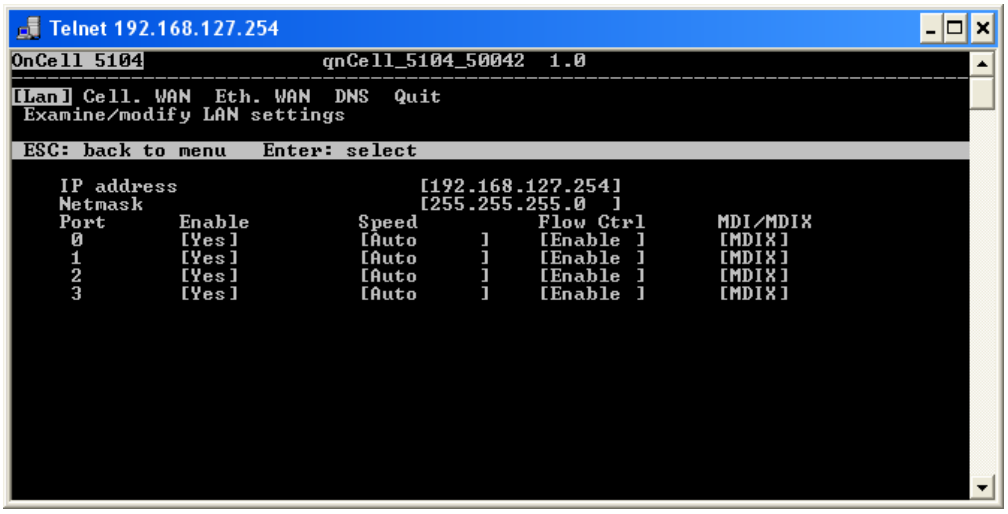
Telnet 192.168.127.254
OnCell 5104 qnCell_5104_50042 1.0
[Lan] Cell. WAN Eth. WAN DNS Quit
Examine/modify LAN settings
ESC: back to menu Enter: select
IP address [192.168.127.254]
Netmask [255.255.255.0 ]
Port Enable Speed Flow Ctrl MDI/MDIX
0 [Yes] [Auto ] [Enable ] [MDIX]
1 [Yes] [Auto ] [Enable ] [MDIX]
2 [Yes] [Auto ] [Enable ] [MDIX]
3 [Yes] [Auto ] [Enable ] [MDIX]

7. Press **ESC** twice to return to the previous page.

8. Press **A** or use the arrow keys to select **Save** and then press **ENTER**. Press **ENTER** again to confirm the save command.

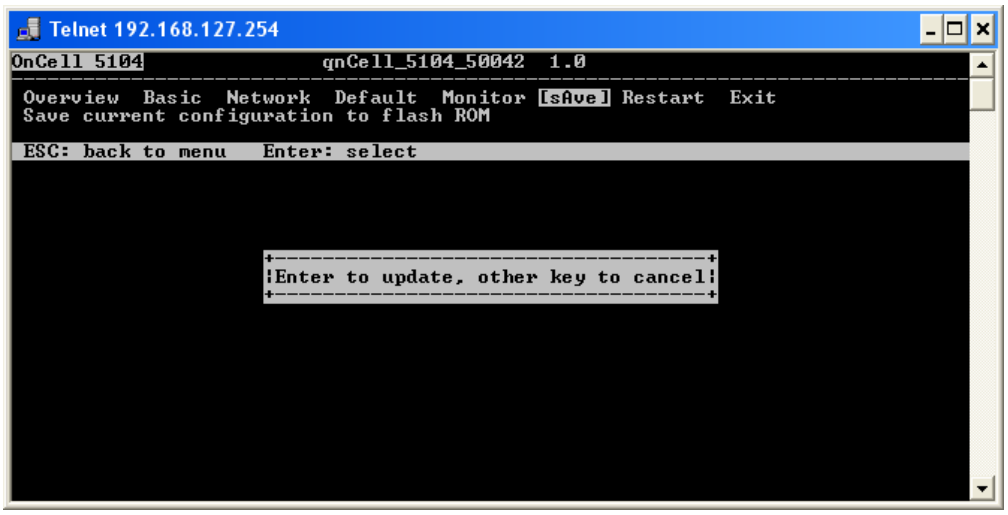
Telnet 192.168.127.254
OnCell 5104 qnCell_5104_50042 1.0
Overview Basic Network Default Monitor [sAve] Restart Exit
Save current configuration to flash ROM
ESC: back to menu Enter: select
Enter to update, other key to cancel

9. Press **R** or use the arrow keys to select **Restart** and then press **ENTER**. Press **ENTER** again to restart the OnCell 5004/5104.

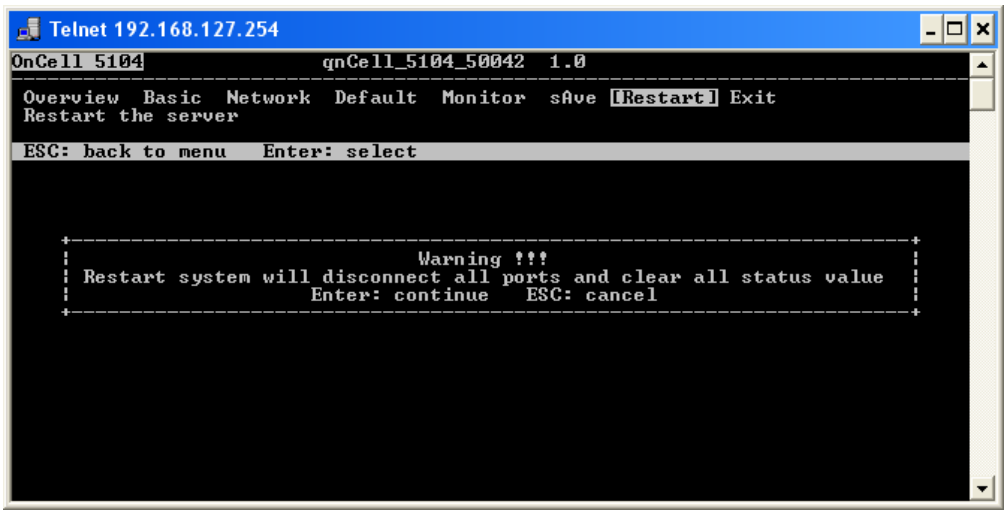
Telnet 192.168.127.254
OnCell 5104 qnCell_5104_50042 1.0
Overview Basic Network Default Monitor sAve [Restart] Exit
Restart the server
ESC: back to menu Enter: select
Warning !!!
Restart system will disconnect all ports and clear all status value
Enter: continue ESC: cancel

## Serial Console

The OnCell 5004/5104 can be configured through the serial console, which works the same as the Telnet console but is accessed through the RS-232 console port rather than over the network.

The following instructions and screenshots show how to enter the serial console using PComm Terminal Emulator, which is available free of charge as part of the PComm Lite suite. You may use a different terminal emulator utility, although the actual screenshots and procedure may vary slightly from the following instructions.

Before running PComm Terminal Emulator, use an RJ45 to DB9-F (or RJ45 to DB25-F) cable to connect the OnCell 5004/5104's RS-232 console port to your PC's COM port (generally COM1 or COM2, depending on how your system is set up). After installing PComm Terminal Emulator, take the following steps to access the RS-232 console utility.

1. Turn off the OnCell 5004/5104's power, and then use a serial cable to connect the OnCell 5004/5104's serial console port to your computer's RS-232 serial port.
2. From the Windows desktop, select **Start → All Programs → PComm Lite → Terminal Emulator**.
3. The PComm Terminal Emulator window should appear. From the **Port Manager** menu, select **Open** (or click the **Open** icon).
4. The Property window opens automatically. Select the **Communication Parameter** tab, and then select the appropriate COM port for the connection (COM1 in this example). Configure the parameters to **115200** for Baud Rate, **8** for Data Bits, **None** for Parity, and **1** for Stop Bits.

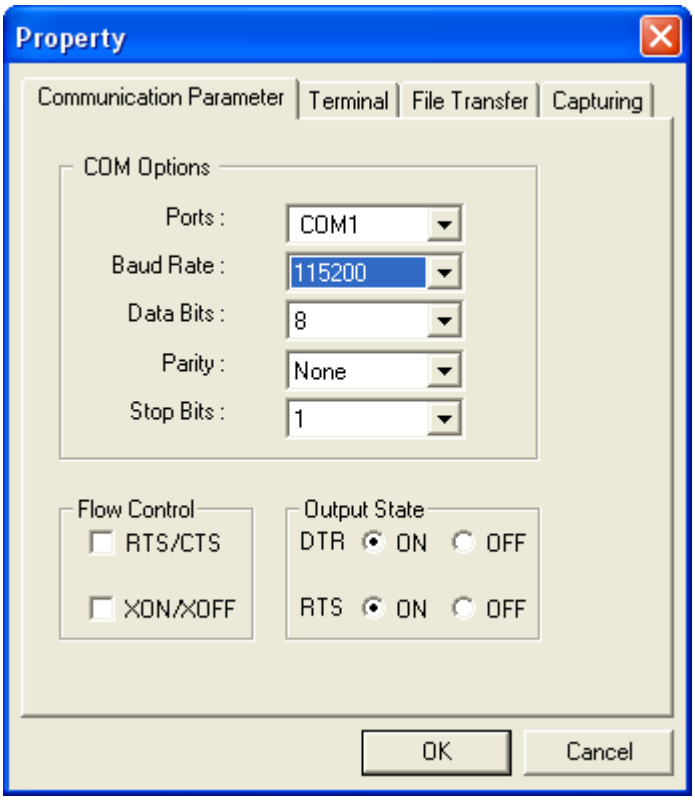

5. From the Property window's Terminal page, select **ANSI** or **VT100** for **Terminal Type** and then click **OK**.

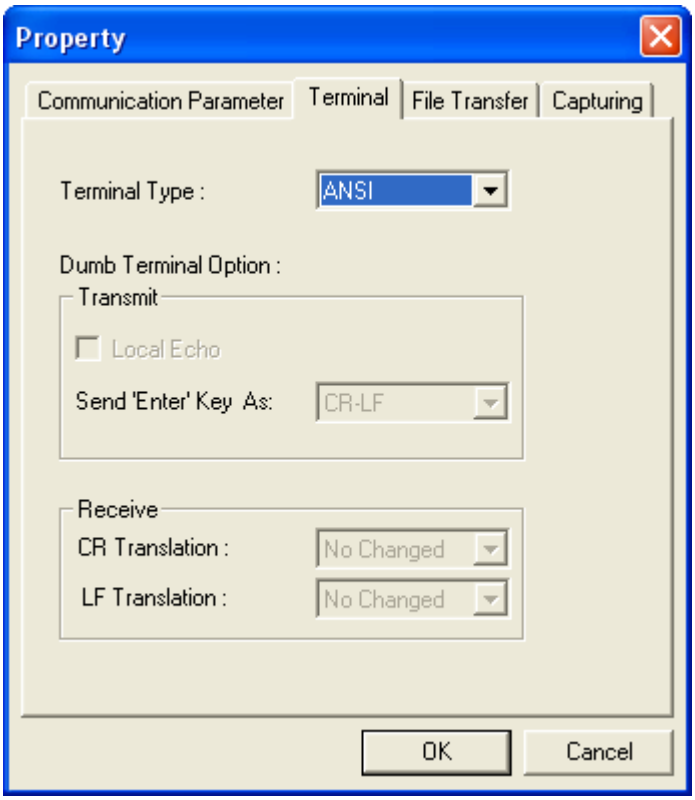


6. If the OnCell 5004/5104 has been set up for password protection, you will be prompted to enter the password. After you enter the password, or if password protection was not enabled, you will be prompted to select the terminal mode. Press **1** for **ansi/vt100** and then press **ENTER**.

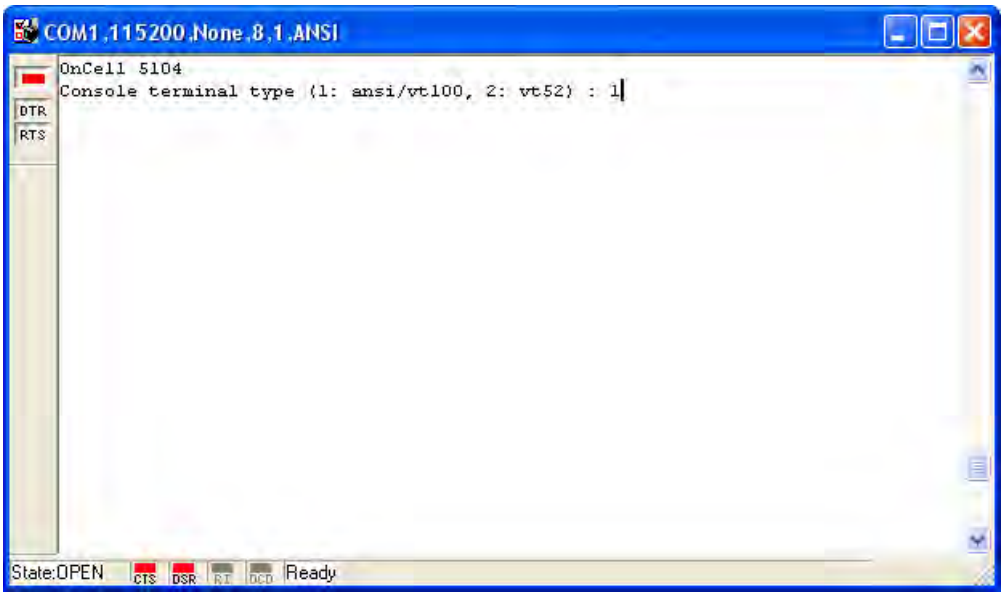

7. The main menu should appear. Once you are in the console, you may configure the IP address through the **Network** menu, just as with the Telnet console. Please refer to steps 4 to 11 in the Telnet Console section to complete the initial IP configuration.

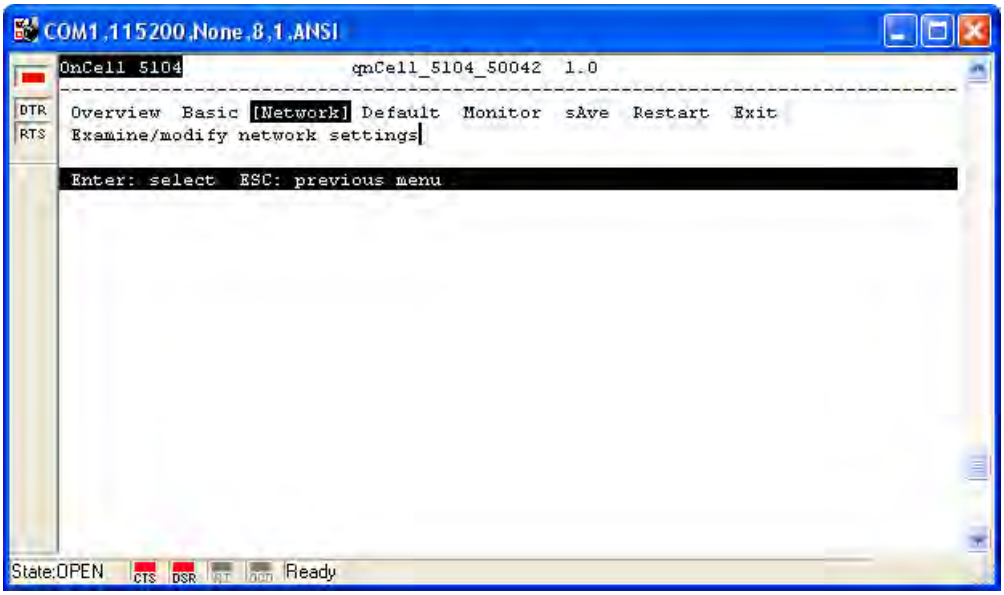

# 4

# Web Console Configuration

In this chapter, we will explain each web management page of the web-based console configuration utility. Moxa's easy-to-use management functions will help you set up your OnCell 5004/5104 and allow you to maintain your wireless network easily.

This chapter covers the following topics:

- **Accessing the Web Console**
- **Web Console Navigation**
  - Basic Settings
  - Device Settings
  - Time Settings
- **Network Settings**
  - LAN Settings
  - LAN Port Configuration
  - Cellular WAN Settings
  - Ethernet WAN Settings
  - DNS Settings
  - DHCP Settings
  - Auto IP Report
- **Advanced Network Settings**
  - Firewall Settings
  - WAN IP Filter
  - Route Table

# Accessing the Web Console

Open your web browser and enter **192.168.127.254** in the website address line. This is the default IP address for the OnCell 5004/5104—if a new address has been assigned, enter the new address instead. Press **ENTER** to load the page.

ATTENTION

The examples and figures in this chapter use the OnCell 5004/5104 factory default IP address of 192.168.127.254. If you have assigned a different IP address to your OnCell 5004/5104, you will need to use that IP address. Refer to *Chapter 3, Initial IP Address Configuration*, for details on how to configure the IP address.

Enter the console password if prompted. The password will be transmitted with MD5 encryption over the Internet to ensure that the password cannot be easily intercepted by eavesdroppers.

The OnCell 5004/5104's web console will appear.

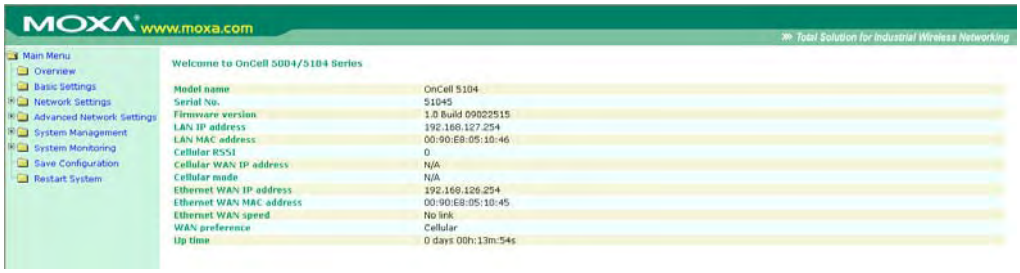

# Web Console Navigation

The left panel of the OnCell 5004/5104's web console is the navigation panel, and contains an expandable menu tree for navigating among the various settings and categories. When you click on a menu item in the navigation panel, the main window will display the corresponding options for that item. Configuration changes can then be made in the main window. For example, if you click on **Basic Settings** in the navigation panel, the main window will show a page of basic settings that you can configure.

You must click on the **Submit** button to keep your configuration changes. The **Submit** button is located at the bottom of every page that has configurable settings. If you navigate to another page without clicking the Submit button, your settings will be lost.

**Changes will not take effect until they are saved and the OnCell is restarted!** You may complete this in one step by clicking on the Save/Restart option after you submit a change. If you need to make several changes before restarting, you may save your changes without restarting by selecting **Save Configuration** in the navigation panel. If you restart the OnCell without saving your configuration, the OnCell will discard all submitted changes.

# Basic Settings

The **Basic Settings** screen can be accessed from the navigation panel.

## Device Settings

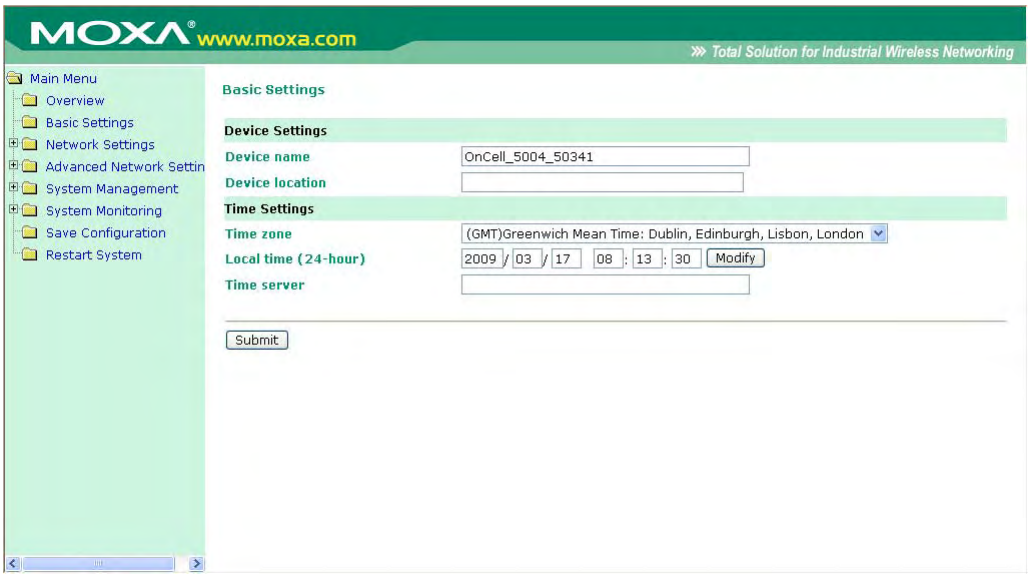


**Device name:** This is an optional free text field for your own use; it does not affect the operation of the OnCell 5004/5104, and can be used to help differentiate one OnCell 5004/5104 device from another.

**Device location:** This is an optional free text field for your own use; it does not affect the operation of the OnCell 5004/5104, and is useful for assigning or describing the location of an OnCell 5004/5104. If you need to manage multiple servers, you should use this field to indicate the precise physical location of each device.

# Time Settings

The OnCell 5004/5104 has a built-in Real-Time Clock for time calibration functions. Functions such as Auto Warning Email or SNMP Trap can add real-time information to messages.

Before making any adjustments to the time, first select the correct time zone and submit the change. The console will display the real time according to the time zone. To modify the real time clock, click on **Modify** next to the **Local time** field. Once you submit the new time, the OnCell 5004/5104's firmware will modify the GMT time based on your time zone and local time settings.

ATTENTION

**There is a risk of explosion if the real-time clock battery is replaced with the wrong type!** The OnCell 5004/5104's real time clock is powered by a lithium battery. We strongly recommend that you do not attempt to replace the lithium battery without help from a qualified Moxa support engineer. If you need to change the battery, please contact the Moxa RMA service team.

**Time zone** (default=GMT Greenwich Mean Time): This field shows the currently selected time zone and allows you to select a different time zone.

**Local time:** This field shows the time that you last opened or refreshed the browser. To set the local time for the OnCell 5004/5104, click on the Modify button, update the date and time, and then click on submit.

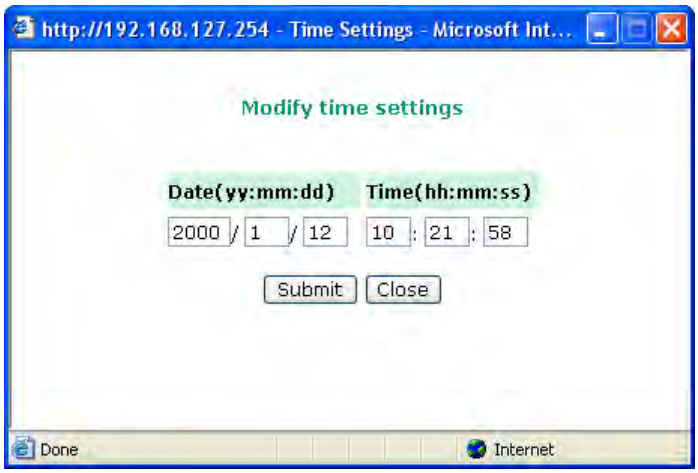


**Time server:** The OnCell 5004/5104 uses SNTP (RFC-1769) for auto time calibration. You may enter a time server IP address or domain name in this optional field. Once the OnCell 5004/5104 is configured with the correct time server address, it will request time information from the time server every 10 minutes.

# Network Settings

## LAN Settings

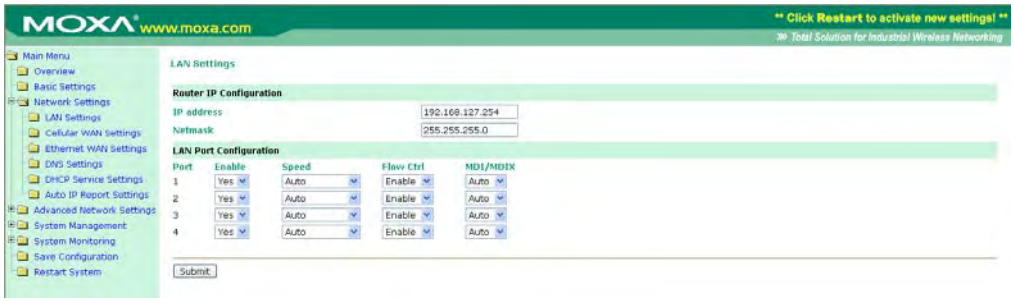


You can access **LAN Settings** by expanding the **Network Settings** item in the navigation panel. Use the LAN Settings page to assign the OnCell 5004/5104's IP address, netmask, and other LAN Port configuration parameters.

> Note: You must assign a valid IP address to your OnCell 5004/5104 before it will work in your network environment. Your network system administrator should provide you with a unique IP address and related settings for your network. First-time users can refer to Chapter 3, Initial IP Address Configuration, for more information.

**IP Address** (default=192.168.127.254): Enter the IP address that is assigned to your OnCell 5004/5104. All LAN ports on the OnCell 5004/5104 will share this IP address. An IP address is a number assigned to a network device (such as a computer) as a permanent address on the network. Computers use the IP address to identify and talk to each other over the network. Choose a proper IP address that is unique and valid for your network environment.

**Netmask** (default=255.255.255.0): Enter the subnet mask. A subnet mask represents all of the network hosts at one geographic location, in one building, or on the same local area network. When a packet is sent out over the network, the OnCell 5004/5104 will use the subnet mask to check whether the desired TCP/IP host specified in the packet is on the local network segment. If the address is on the same network segment as the OnCell 5004/5104, a connection is established directly from the OnCell 5004/5104. Otherwise, the connection is established through the given default gateway.

## LAN Port Configuration

LAN Port Configuration settings are included to give the user control over Port Access, Port Transmission Speed, Flow Control, and Port Type (MDI or MDIX). An explanation of each configuration item is given below.

**Enable** (default=Yes):

| Option | Description |
|---|---|
| Yes | Allows data transmission through the port. |
| No | Immediately shuts off port access. |

**Speed** (default=Auto):

| Option | Description |
|---|---|
| Auto | Allows the port to use the IEEE 802.3u protocol to negotiate with connected devices. The port and connected devices will determine the best speed for that connection. |
| 10Mbps Half | Choose one of these fixed speed options if the opposing Ethernet device has trouble auto-negotiating for line speed. |
| 10Mbps Full | |
| 100Mbps Half | |
| 100Mbps Full | |

**Flow Ctrl** (default=Enable):

This setting enables or disables the flow control capability of this port when the "speed" setting is in "auto" mode. The final result will be determined by the "auto" process between the OnCell and connected device.

| Option | Description |
|---|---|
| Enable | Enables the flow control capability of this port when in auto-nego mode. |
| Disable | Disables the flow control capability of this port when in auto-nego mode. |

**MDI/MDIX** (default=Auto):

| Option | Description |
|---|---|
| Auto | Allows the port to auto detect the port type of the opposing Ethernet device and change the port type accordingly. |
| MDI | Choose the MDI or MDIX option if the opposing Ethernet device has trouble auto-negotiating for port type. |
| MDIX | |

## Cellular WAN Settings

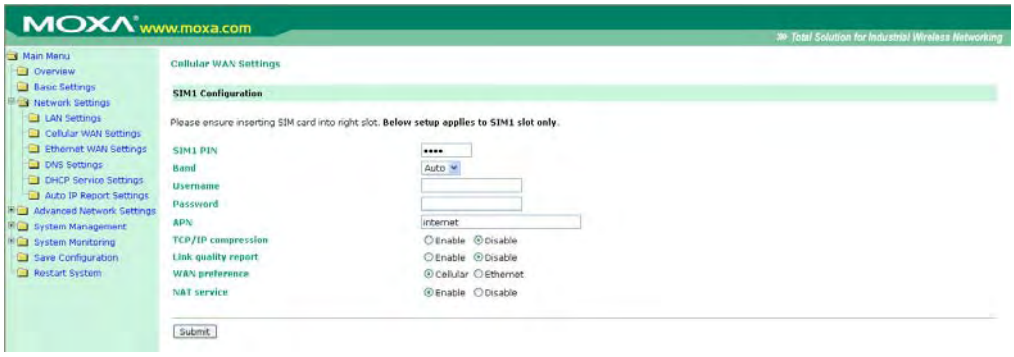


From the left navigation panel, click **Network Settings → Cellular WAN Settings** to configure the SIM card Settings. The various configuration items are described below:

**SIM PIN:** This is a pin code that locks the SIM card until you enter the correct code. Use the pin to protect your account. The default code is set by the Service Provider. Note that a cell phone must be used to change the PIN.

**Band** (default=Auto): The GSM/GPRS band will be detected automatically.

**Username:** This is the user ID account.

**Password:** This is the user password.

**APN:** Before using the GPRS, an APN (Access Point Name) must be configured as a modem initialization command.

**TCP/IP compression** (default=Disable): Use this field to indicate whether the remote user's application requests compression.

**Link quality report** (default=Disable): Set this field to **Enable** to allow the OnCell 5004/5104 to disconnect a connection if the link noise exceeds a certain threshold.

**WAN Preference** (default=Cellular): Select either cellular or Ethernet. Note that the WAN preference option on the Ethernet WAN settings page (see below) will be updated automatically.

Note: You need to select one of the two WAN preferences. If the line is disconnected, the router will not automatically switch to the other WAN preference.

**NAT service** (default=Enable): If you Enable NAT service, LAN-side applications will be able to link to WAN-side applications.

## Ethernet WAN Settings

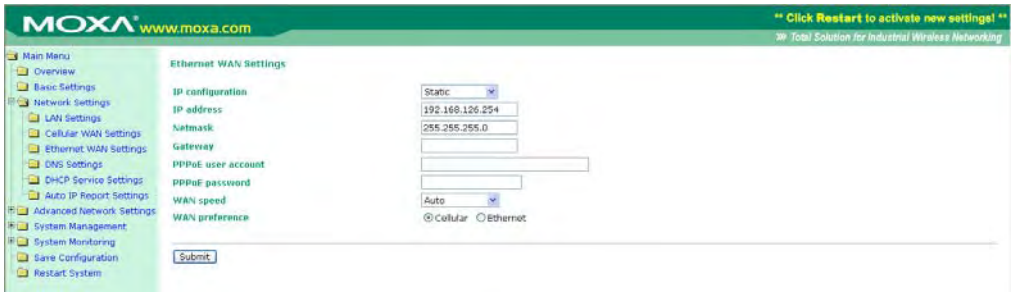


You can access **Network Settings → Ethernet WAN Settings** by expanding the item in the navigation panel. Ethernet WAN Settings is where you assign the OnCell 5004/5104's IP address, netmask, Gateway, and other parameters for the Ethernet interface.

Note: You must assign a valid WAN IP address to your OnCell 5004/5104 before it will work in your network environment. Your network system administrator should provide you with a unique IP address and related settings for your network.

**IP configuration** (default=Static): You can choose from four possible IP configuration modes:

| Mode | Description |
|---|---|
| Static | User-defined IP address, netmask, and gateway |
| DHCP | DHCP server-assigned IP address, netmask, gateway, and DNS |
| PPPoE | Your ISP will provide you with a username and password. This option is typically used for DSL services |
| DHCP/BOOTP | DHCP server-assigned IP address, netmask, gateway, and DNS, or BOOTP server-assigned IP address (if the DHCP server does not respond) |
| BOOTP | BOOTP server-assigned IP address |

**IP Address** (default=192.168.126.254): Enter the WAN IP address that the OnCell 5004/5104 will use to connect to the internet.

**Netmask** (default=255.255.255.0): Enter the subnet mask. A subnet mask represents all of the network hosts at one geographic location, in one building, or on the same local area network. When a packet is sent out over the network, the OnCell 5004/5104 will use the subnet mask to check whether the desired TCP/IP host specified in the packet is on the local network segment. If the address is on the same network segment as the OnCell 5004/5104, a connection is established directly from the OnCell 5004/5104. Otherwise, the connection is established through the given default gateway.

**Gateway:** Enter the IP address of the gateway if applicable. A gateway is a network computer that acts as an entrance to another network. Usually, the computers that control traffic within the network or at the local Internet service provider are gateway nodes. The OnCell 5004/5104 needs to know the IP address of the default gateway computer in order to communicate with the hosts outside the local network environment. For correct gateway IP address information, consult the network administrator.

**PPPoE user account:** If your ISP uses a PPPoE connection, enter the user account name here. This option is typically used for DSL services.

**PPPoE password:** Enter your password.

**WAN speed** (default=Auto):

| Option | Description |
|---|---|
| Auto | Allows the port to use the IEEE 802.3u protocol to negotiate with connected devices. The port and connected devices will determine the best speed for that connection. |
| 10Mbps Half | Choose one of these fixed speed options if the opposing Ethernet device has trouble auto-negotiating for line speed. |
| 10Mbps Full | |
| 100Mbps Half | |
| 100Mbps Full | |

**WAN Preference** (default=Cellular): You must select either one of the WAN interface for data transmission. Note that the WAN preference option on the Cellular WAN settings page (see above) will be updated automatically.

Note: You need to select one of the two WAN preferences. If the line is disconnected, the router will not automatically switch to the other WAN preference.

## DNS Settings

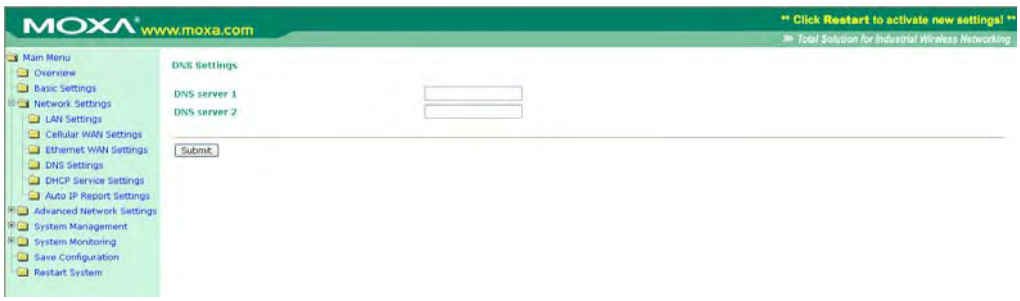

**DNS server 1:** This is an optional field. If your network has access to a DNS server, you may enter the DNS server's IP address in this field. This allows the OnCell 5004/5104 to use domain names instead of IP addresses to access hosts.

The Domain Name System (DNS) is used to identify Internet domain names and to translate the names into IP addresses. A domain name is an alphanumeric name, such as www.moxa.com, that it is usually easier to remember than the numeric IP address. A DNS server is a host that translates this kind of text-based domain name into the actual IP address used to establish a TCP/IP connection.

When the user wants to visit a particular website, the user's computer sends the domain name (e.g., www.moxa.com) to a DNS server to request that website's numeric IP address. When the IP address is received from the DNS server, the user's computer uses that information to connect to the website's web server. The OnCell 5004/5104 plays the role of a DNS client, in the sense that it actively queries the DNS server for the IP address associated with a particular domain name. The following functions in the OnCell 5004/5104's web console support the use of domain names in place of IP addresses: Time Server, Destination IP Address (in TCP Client mode), Mail Server, SNMP Trap Server, and SMTP Server.

**DNS server 2:** This is an optional field. The IP address of another DNS server may be entered in this field for times when DNS server 1 is unavailable.

## DHCP Settings

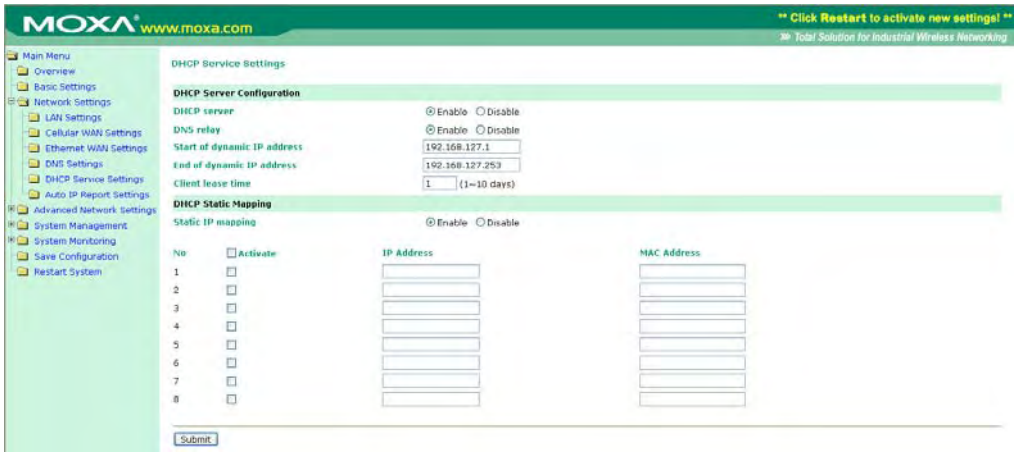


**DHCP** (default=Enable): DHCP stands for Dynamic Host Control Protocol. When you enable the DHCP Server, it will automatically assign an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to "Obtain an IP Address Automatically." When you turn your computers on, they will automatically load the proper TCP/IP settings provided by the OnCell 5004/5104. The DHCP Server will automatically allocate an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.

**DNS relay** (default=Enable): If enabled, your computers will use the router as a DNS server. If disabled, the DNS server information will be transferred from your ISP to your computers.

**Start of dynamic IP address:** Enter the starting IP addresses for the DHCP server's IP assignment.

**End of dynamic IP address:** Enter the ending IP addresses for the DHCP server's IP assignment.

**Note:** If you assign static IP addresses to your computers or devices, make sure the IP addresses are outside of this range or you may have an IP conflict.

**Client lease time:** The length of time for the IP address lease. Enter the Lease time in minutes.

**Static IP mapping:** If enabled, the mapping list allows you to assign specific IP addresses to specific MAC addresses, provided the IP addresses are in the range specified under DHCP Server Configuration.

## Auto IP Report

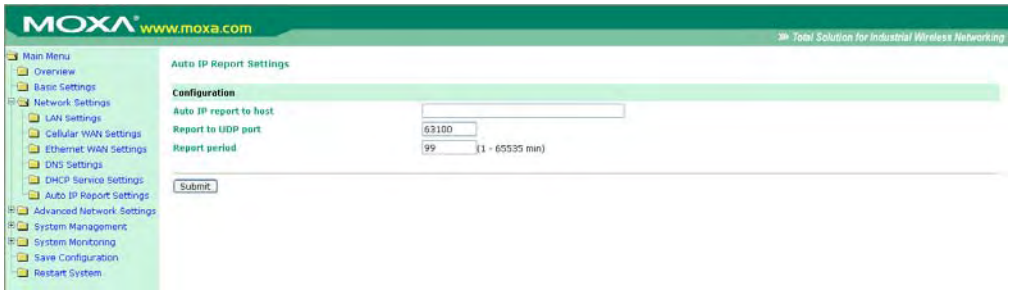


**Auto IP report to host:** Reports generated by the Auto report function will be sent automatically to this IP address or host name.

**Report to UDP port** (default=63100): This is the UDP port number assignment for the serial port on the OnCell 5004/5104.

**Report period** (default=99): You can use this option to set the report time automatically.

# Advanced Network Settings

## Firewall Settings

### Virtual Server Settings

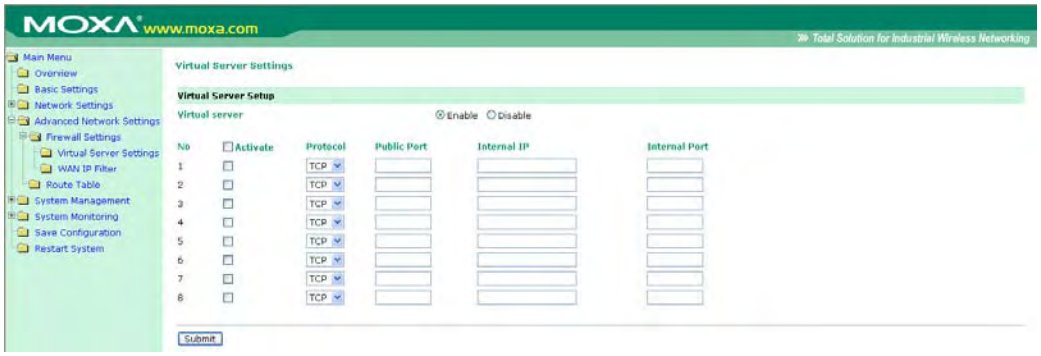


**Virtual Server Settings** (default=Disable): This function allows remote users to access the Host or FTP services via a public IP address, and automatically redirects them to local servers in the LAN (Local Area Network).

The OnCell firewall feature filters out unrecognized packets to protect your LAN network when computers networked with the OnCell are hidden from public view. If you wish, you can make some of the LAN computers accessible from the Internet by enabling Virtual Server. Depending on the requested service, the OnCell redirects the external service request to the appropriate server within the LAN network.

The OnCell is also capable of port-redirection, which means that traffic coming in to a particular port may be redirected to a different port on the server computer.

**Public Port:** The public port is the port seen from the Internet side. Public ports cannot be set to ports used by OP modes (950, 966, 4001, …)

**Internal IP:** Enter the IP address of the host on your local network that you want to link the incoming service to.

**Internal Port:** The internal port is the port being used by the application on the host within your local network.

## WAN IP Filter

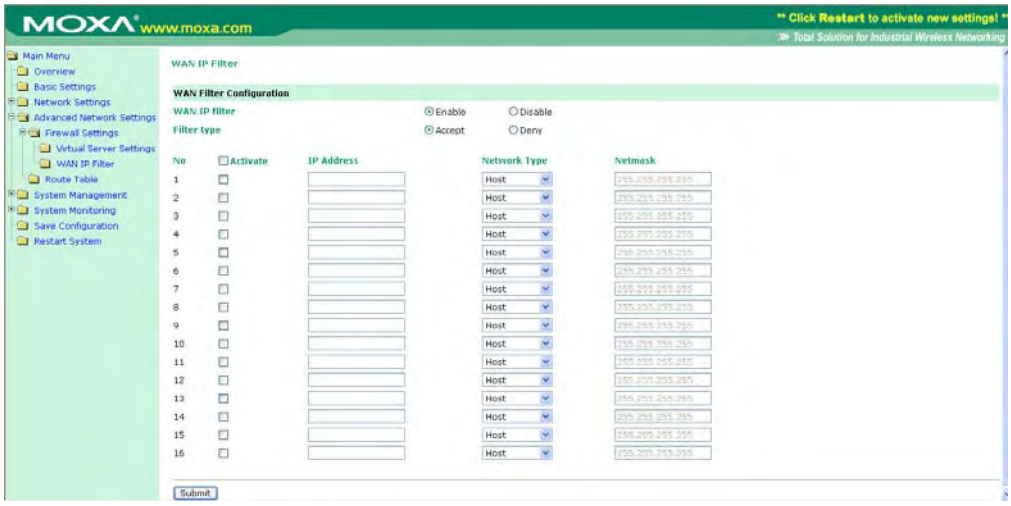


The OnCell 5004/5104 uses an IP address-based filtering method to control access to its Ethernet ports. The WAN IP Filter allows you restrict network access to the OnCell 5004/5104. Access is controlled by IP address. When the WAN IP Filter list is enabled, a WAN's IP address must be listed in order to gain access to the OnCell 5004/5104. You may add a specific address or range of addresses by using a combination of IP address and netmask, as follows:

**Filter Type:** If you select Accept, the the WAN IPs that you enter will be allowed to access the OnCell 5004/5104. If you select Deny, the WAN IPs that you enter will be denied access to the OnCell 5004/5104.

**IP Address:** This is the WAN IP address or cellular network address which you would like to filter.

**Netmask type:** Commonly used network classes are indicated below:

| Network Type | Netmask |
|---|---|
| Host | 255.255.255.255 |
| Class A | 255.0.0.0 |
| Class B | 255.255.0.0 |
| Class C | 255.255.255.0 |
| User Define | --- |

**Netmask:** This is the destination network's netmask.

# Route Table

You can access the **Route Table** by expanding **Advanced Network Settings** in the navigation panel. Use the route table to configure how the OnCell 5004/5104 will connect to an outside network.

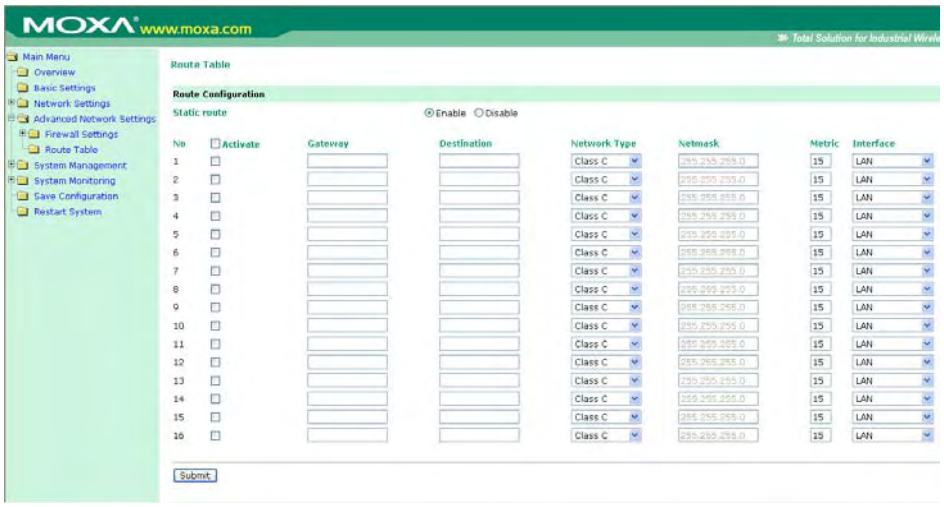


You are allowed up to 16 entries in the route table. For each entry, you must provide the gateway, destination, netmask type, netmask, metric hops, and interface.

**Gateway:** This is the IP address of the next-hop router.

**Destination:** This is the host's IP address or the network address of the route's destination.

**Netmask type:** Commonly used network classes are indicated below:

| Network Type | Netmask |
|---|---|
| Host | 255.255.255.255 |
| Class A | 255.0.0.0 |
| Class B | 255.255.0.0 |
| Class C | 255.255.255.0 |
| User Define | --- |

**Netmask:** This is the destination network's netmask.

**Metric:** You may use this optional field to enter the number of hops from the source to the destination. This allows the OnCell 5004/5104 to prioritize the routing of data packets if there is more than one router available to reach a given destination.

**Interface:** This is the network interface to which the packet must be sent.

# 5

# System Management Settings

In this chapter, we describe the OnCell 5004/5104's system management settings. The same configuration options are also available through the Telnet and serial console.

This chapter covers the following topics:

- **Misc. Network Settings**
  - SNMP Agent Settings
  - DDNS Configuration
- **Auto Warning Settings**
  - Event Settings
  - E-mail Alert
  - SNMP Trap
  - SMS Alert
- **Maintenance**
  - Console Settings
  - PING Test
  - System Log Settings
  - Firmware Upgrade
  - Configuration Import/Export
  - Load Factory Defaults
  - Change Password
- **Certificate**
  - Ethernet SSL Certificate Import
  - Certificate/Key Delete
- **System Monitoring**
  - Network Connections
  - Network Statistics
  - Routing
  - DHCP Client List
  - Internet Sessions List
  - System Log
  - Dout State
  - Din and Power Status
- **Save Configuration**
- **Restart**
  - Restart System

# Misc. Network Settings

## SNMP Agent Settings

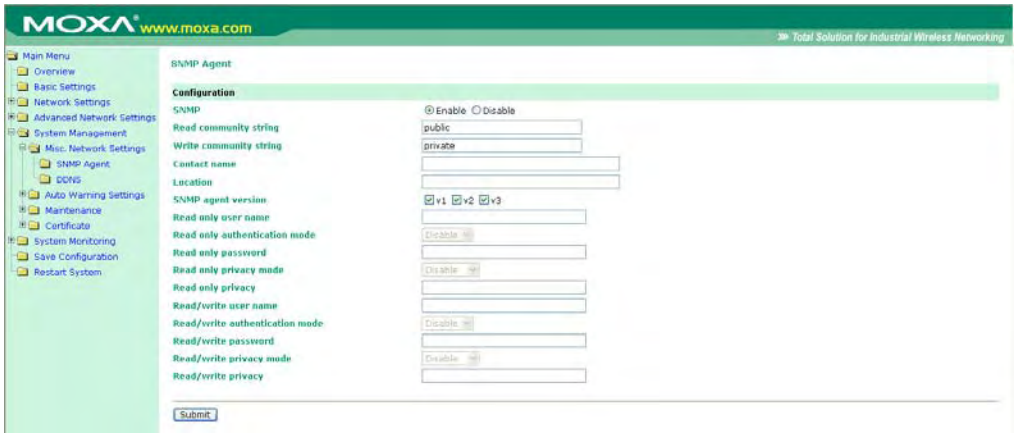


**SNMP:** To enable the SNMP Agent function, select the **Enable** option, and enter a community name (e.g., **public**).

**Read community string** (default=public): This is a text password that is used to weakly authenticate queries to agents of managed network devices.

**Write community string** (default=private): This is a text password that is used to weakly authenticate changes to agents of managed network devices.

**Contact name:** The optional SNMP contact information usually includes an emergency contact name and telephone or pager number.

**Location:** Use this optional field to specify the location string for SNMP agents such as the OnCell 5004/5104. This string is usually set to the street address where the OnCell 5004/5104 is physically located.

**SNMP agent version:** The OnCell 5004/5104 supports SNMP V1, V2, and V3.

**Read-only and Read/Write Access Control**

The following fields allow you to define user names, passwords, and authentication parameters for two levels of access: read-only and read/write. The name of the field will indicate which level of access it refers to. For example, **Read only** authentication mode allows you to configure the authentication mode for read-only access, whereas **Read/write** authentication mode allows you to configure the authentication mode for read/write access. For each level of access, you may configure the following:

**User name:** Use this optional field to identify the user name for the specified level of access.

**Authentication mode** (default=Disable): Use this field to select MD5 or SHA as the method of password encryption for the specified level of access, or to disable authentication

**Privacy mode** (default=Disable): Use this field to enable or disable DES_CBC data encryption for the specified level of access.

**Password:** Use this field to set the password for the specified level of access.

**Privacy:** Use this field to define the encryption key for the specified level of access.

## DDNS Configuration

**DDNS (default=Enable):** The Dynamic Domain Name System is a method of keeping a domain name linked to a changing IP Address. Check the box to enable DDNS.

**Server address:** Choose your DDNS provider from the drop down menu.

**Host name:** Enter the Host Name that you registered with your DDNS service provider.

**Username:** Enter the Username for your DDNS account.

**Password:** Enter the Password for your DDNS account.

# Auto Warning Settings

## Event Settings

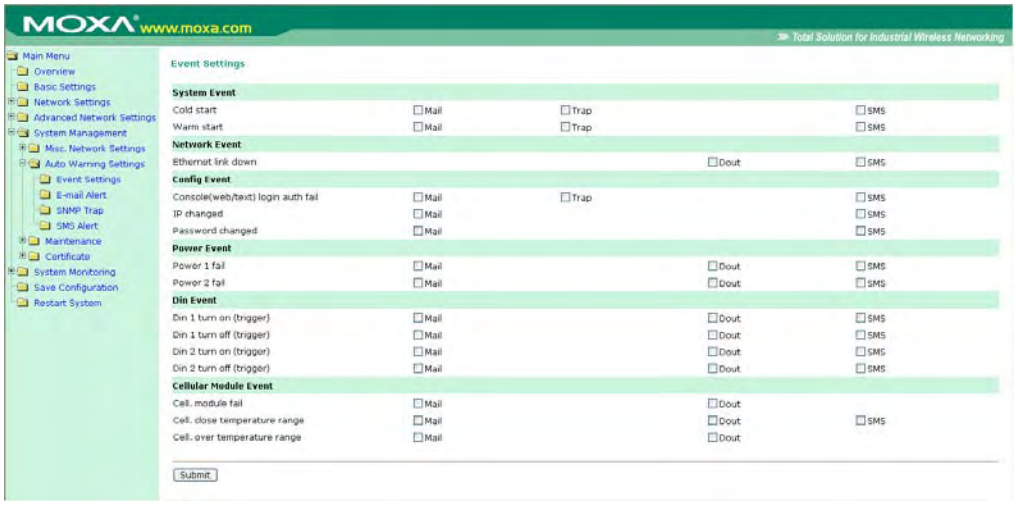


On the Event Settings page, you may configure how administrators are notified of certain system, network, configuration, power, Din, and cellular module events. Depending on the event, different options for automatic notification are available, as shown above. **Mail** refers to sending an e-mail to a specified address. **Trap** refers to sending an SNMP Trap. **Dout** is available on the network, power, Din, and cellular module event. **SMS** refers to sending a message to a specified phone number.

**Cold start:** This refers to starting the system from a power off state, or after upgrading the firmware

**Warm start:** This refers to restarting the OnCell 5004/5104 without turning the power off.

**Ethernet link down:** These settings configure the OnCell 5004/5104 to change the status of the relay output and SMS if the specified connection goes down.

**Console (web/text) login auth fail:** This field refers to a failed attempt to log in to a password protected OnCell 5004/5104 console.

**IP changed:** With this IP address change, the OnCell 5004/5104 will send and email or SMS warning after it reboots.

**Password changed:** With this option selected, the OnCell 5004/5104 will attempt to send an e-mail or SMS warning after it reboots with a new console password. If the OnCell 5004/5104 is unable to send an e-mail or SMS message to the mail server within 15 seconds, it will still reboot without sending the e-mail or SMS.

**Power event:** The OnCell 5004/5104 provides two DC power inputs for redundancy. If either power fails, the OnCell 5004/5104 will attempt to send an e-mail warning, relay output, or SMS.

**Din event:** When the status of digital input 1 or 2 is changed, the OnCell 5004/5104 will attempt to send an e-mail, trigger the digital output, or send an SMS.

**Cell. module fail:** When the cellular module fails to function, the OnCell 5004/5104 will attempt to send an e-mail, or trigger the digital output to inform users.

**Cell. close temperature range:** When the temperature on the cellular module inside the OnCell 5004/5104 is close to the upper or lower limit, the OnCell 5004/5104 will attempt to send an e-mail, trigger the digital output, or send an SMS message to inform users.

**Cell. over temperature range:** When the temperature on the cellular module inside the OnCell 5004/5104 is outside the normal temperature range, the OnCell 5004/5104 will attempt to send an e-mail, or trigger the digital output to inform users.

## E-mail Alert

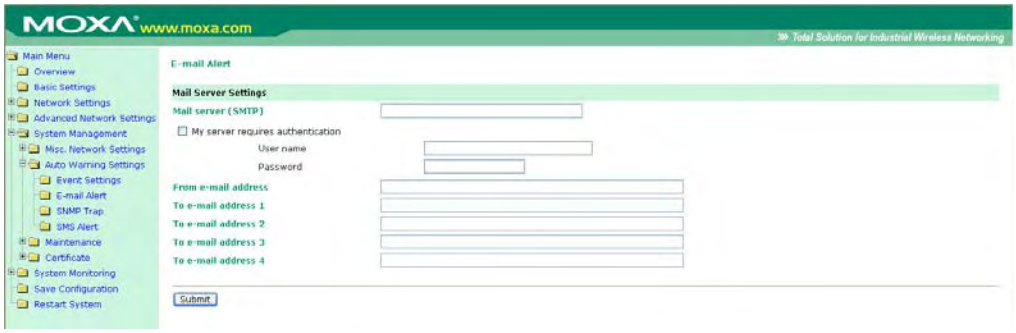


The E-mail Alert settings determine how e-mail warnings are sent for system and serial port events. You may configure up to 4 e-mail addresses to receive automatic warnings.

ATTENTION

Consult your Network Administrator or ISP for the proper mail server settings. The Auto warning function may not work properly if it is not configured correctly. The OnCell 5004/5104's SMTP AUTH supports LOGIN, PLAIN, and CRAM-MD5 (RFC 2554).

**Mail server:** This field is for your mail server's domain name or IP address.

**User name:** This field is for your mail server's user name, if required.

**Password:** This field is for your mail server's password, if required.

**From e-mail address:** This is the e-mail address from which automatic e-mail warnings will be sent.

**To e-mail address 1 to 4:** This is the e-mail address or addresses to which the automatic e-mail warnings will be sent.

## SNMP Trap

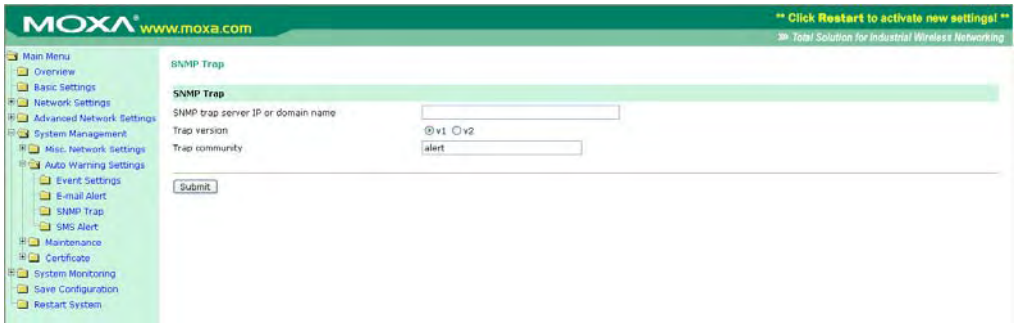


**SNMP trap server IP:** Use this field to indicate the IP address to use for receiving SNMP traps.

**Trap version (default=v1):** Use this field to select the SNMP trap version.

**Trap community (default=alert):** Use this field to designate the SNMP trap community.

## SMS Alert

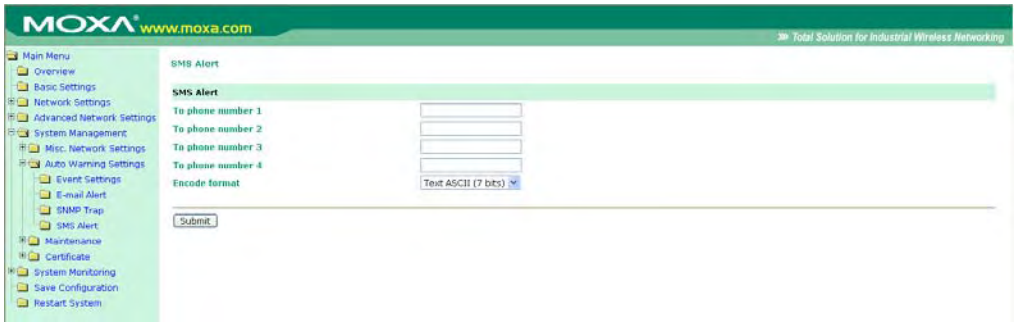


**To phone number 1 to 4:** This is the phone number to which the automatic warnings message will be sent.

**Encode format:**

| SMS Data Format | |
|---|---|
| Text ASCII (7 bits) (default) | 7 bits text format (160 bytes per packet) |
| Binary | 8 bits binary (140 bytes per packet) |
| Unicode | 16 bits Unicode (UCS2) format (70 bytes per packet) |

# Maintenance

## Console Settings

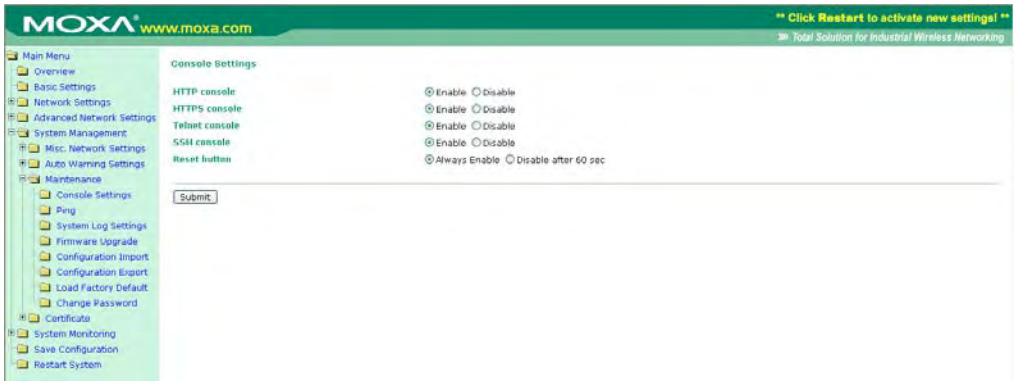


On this screen, access to different OnCell 5004/5104 configuration console options (HTTP, HTTPS, Telnet, SSH) can be enabled or disabled. Refer to Change Password later in this chapter for more information on passwords.

**Reset button** (default=Always Enable): Select "Always Enable" to activate the reset button. Use the "Disable after 60 sec" option to avoid resetting the server when the reset button is pressed accidentally.

## PING Test

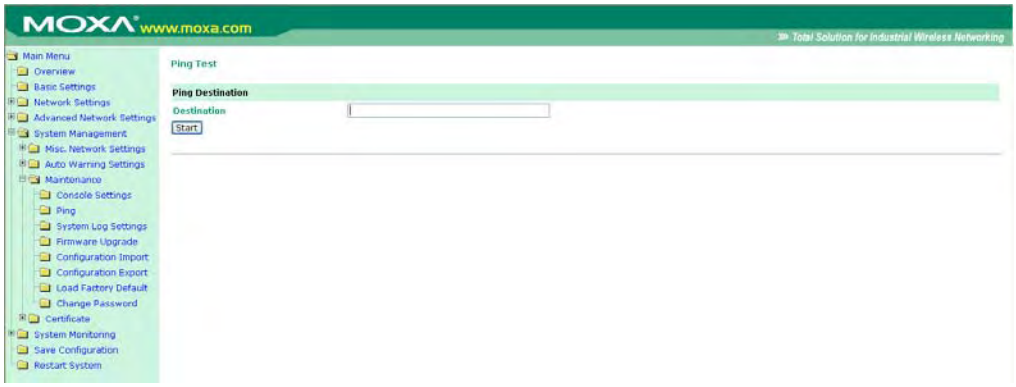


You can ping an IP address from the OnCell 5004/5104 web console in order to test the Ethernet connection. Enter the IP address or domain name in the **Destination** field to make sure the connection is OK.

## System Log Settings

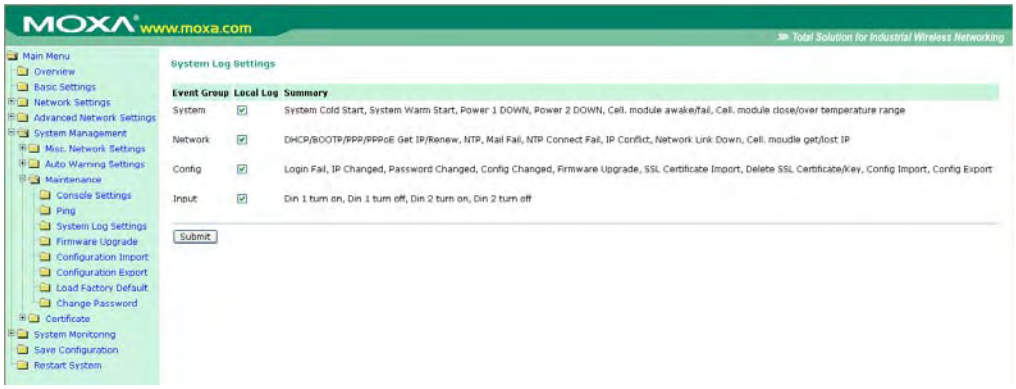
MOXA www.moxa.com
Total Solution for Industrial Wireless Networking
Main Menu
Overview
Basic Settings
Network Settings
Advanced Network Settings
System Management
Misc. Network Settings
Auto Warning Settings
Maintenance
Console Settings
Ping
System Log Settings
Firmware Upgrade
Configuration Import
Configuration Export
Load Factory Default
Change Password
Certificate
System Monitoring
Save Configuration
Restart System
System Log Settings
Event Group Local Log Summary
System System Cold Start, System Warm Start, Power 1 DOWN, Power 2 DOWN, Cell. module awake/fail, Cell. module close/over temperature range
Network DHCP/BOOTP/PPP/PPPoE Get IP/Renew, NTP, Mail Fail, NTP Connect Fail, IP Conflict, Network Link Down, Cell. moudle get/lost IP
Config Login Fail, IP Changed, Password Changed, Config Changed, Firmware Upgrade, SSL Certificate Import, Delete SSL Certificate/Key, Config Import, Config Export
Input Din 1 turn on, Din 1 turn off, Din 2 turn on, Din 2 turn off
Submit

System Log Settings allows the administrator to customize which network events are logged by the OnCell 5004/5104. Events are grouped into five categories, known as event groups, and the administrator selects which groups to log under Local Log. The actual system events that would be logged for each system group are listed under summary. For example, if **System** was enabled, then System Cold Start events and System Warm Start events would be logged.

| Group | Event |
|---|---|
| System | System Cold Start, System Warm Start, Power 1 DOWN, Power 2 DOWN, Cell. module awake/fail, Cell. module close/over temperature range |
| Network | DHCP/BOOTP Get IP/Renew, NTP, Mail Fail, NTP Connect Fail, IP Conflict, Network Link Down, Cell. module get/lost IP |
| Config | Login Fail, IP Changed, Password Changed, Config Changed, Firmware Upgrade, SSL Key Import, Config Import, Config Export |
| Input | Din 1 turn on, Din 1 turn off, Din 2 turn on, Din 2 turn off |

## Firmware Upgrade

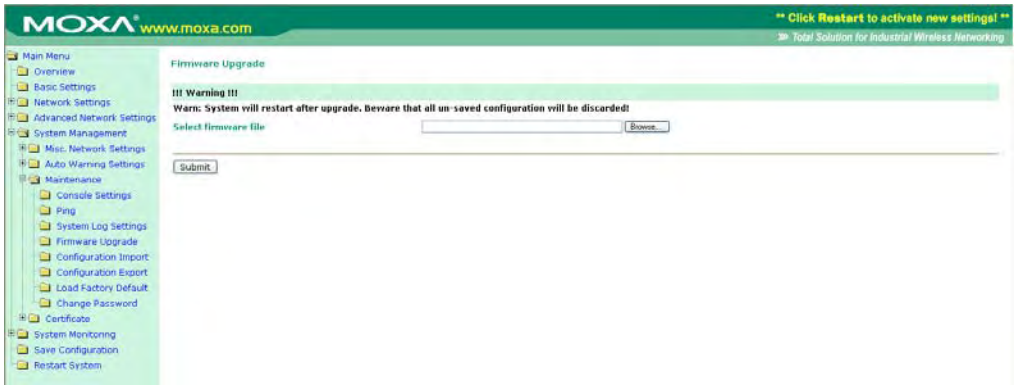


The OnCell 5004/5104's firmware can be upgraded though the web console or the OnCell Search Utility. If you have made any changes to your configuration, remember to save the configuration first before upgrading the firmware. Please refer to Save Configuration later in this chapter for more information. Any unsaved changes will be discarded when the firmware is upgraded. To upgrade the firmware, simply enter the file name and click **Submit**. The latest firmware can be downloaded from www.moxa.com.

# Configuration Import/Export

The OnCell 5004/5104 can share or back up its configuration by exporting all settings to a file.

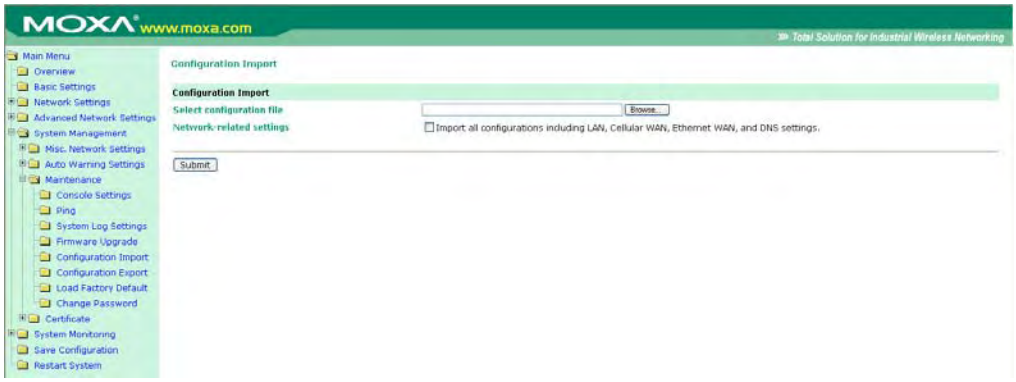


To import a configuration, go to **System Management → Maintenance → Configuration Import**. Enter the configuration file path/name and click Submit. The OnCell 5004/5104's configuration settings will be updated according to the configuration file. If you also wish to import the IP configuration (i.e., the OnCell 5004/5104's IP address, netmask, gateway, etc.), make sure that **Import all configurations including IP configurations** is checked.

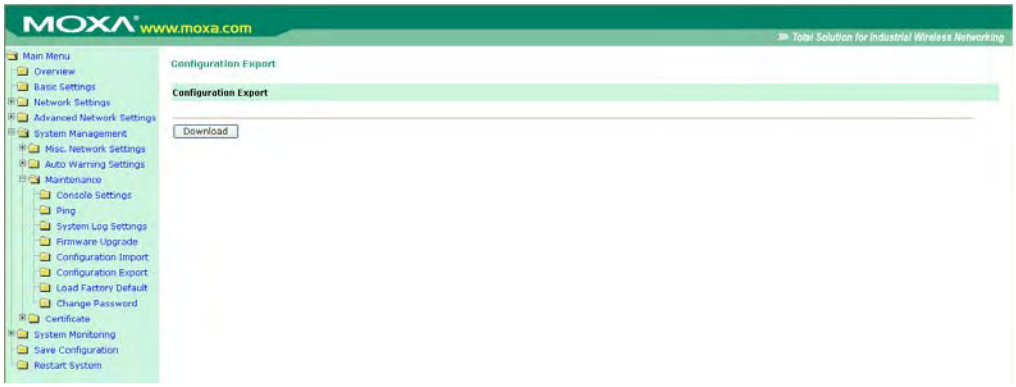


To export a configuration, go to **System Management → Maintenance → Configuration Export** and click **Download**. A standard download window will appear to allow you to download the configuration into a file and location of your choice.

## Load Factory Defaults

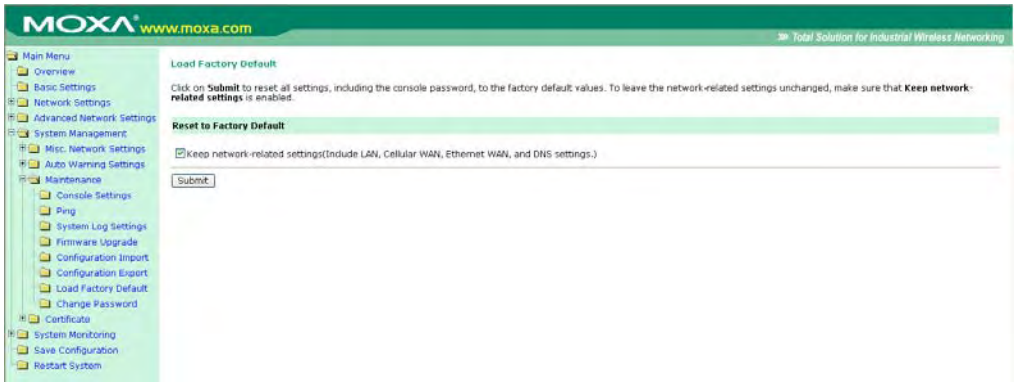


This function will reset all of the OnCell 5004/5104's settings to the factory default values. All previous settings, including the console password will be lost. If you wish to keep the OnCell 5004/5104 IP address, netmask, and other IP settings, make sure **Keep IP settings** is checked before loading the factory defaults.

## Change Password

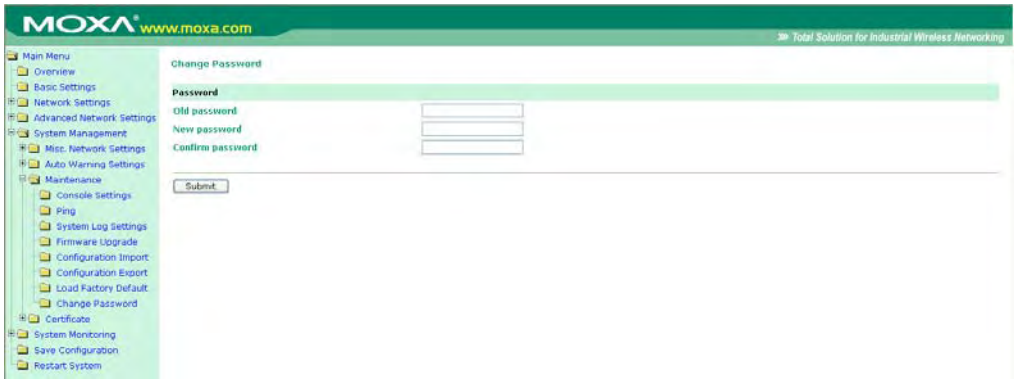


For all changes to the OnCell 5004/5104's password protection settings, you will first need to enter the old password. Leave this blank if you are setting up password protection for the first time. To set up a new password or change the existing password, enter the password under both **New password** and **Confirm password**. To remove password protection, leave the **New password** and **Confirm password** boxes blank.

ATTENTION

If you forget the password, the ONLY way to configure the OnCell 5004/5104 is by using the reset button on the OnCell 5004/5104's casing to load the factory defaults.

Before you set a password for the first time, it is a good idea to export the configuration to a file when you have finished setting up your OnCell 5004/5104. Your configuration can then be easily imported back into the OnCell 5004/5104 if you need to reset the OnCell 5004/5104 due to a forgotten password or for other reasons. Please refer to the section on Configuration Import/Export earlier in this chapter for more details.

# Certificate

## Ethernet SSL Certificate Import

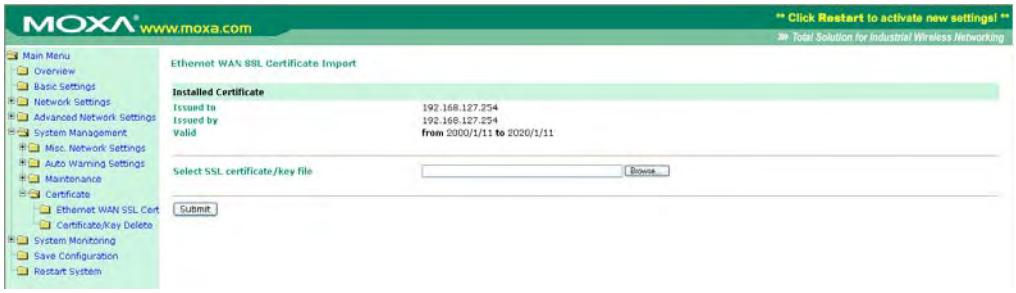


SSL certificate is used to ensure the website you are accessing is the one you trust, and to encrypt the data transmitted between you and the website. The SSL certificate contains unique, authenticated information about the certificate owner. It is issued by a Certificate Authority (CA), such as Verisign, that verifies the identity of the certificate owner.

The OnCell 5004/5104 will generate a new SSL certificate whenever a new IP is used. However, the SSL certificate is issued by the OnCell itself. If you would like to import an SSL certificate issued by a primary CA, you can do it from the "Ethernet SSL Certificate Import" page.

## Certificate/Key Delete

You can delete an SSL certificate on this page. To do so, select the Delete option and then click on the Submit button.

# System Monitoring

## Network Connections

Go to **System Monitoring** under **Network Connections** to view network connection information.

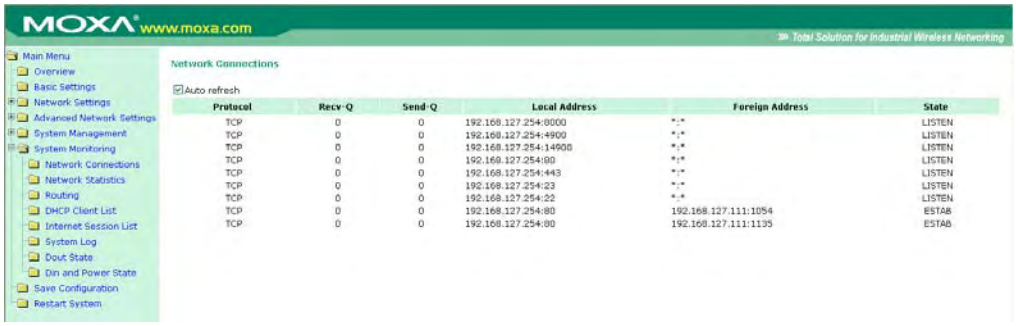

## Network Statistics

Go to System Monitoring under Network Statistics to view network statistics.

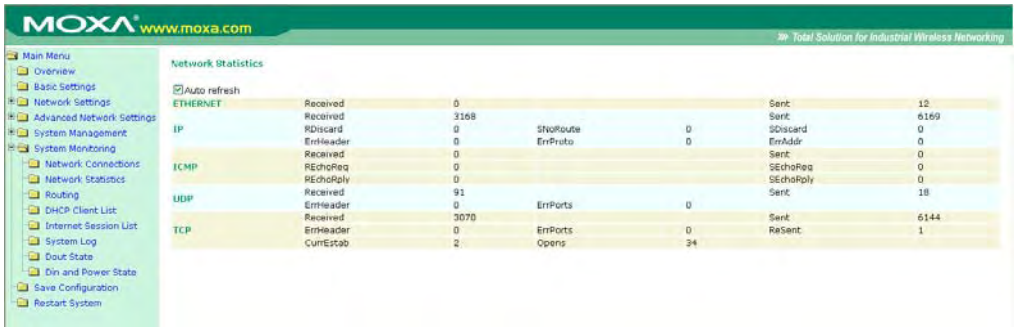


## Routing

Go to System Monitoring under Routing to display the routing information.

Possible flags include:

U: route is up

D: route is down

G: use gateway

+: default gateway

T: static route

H: target is a host

## DHCP Client List

The DHCP Client List shows all the clients that require and have successfully received IP assignments. You can click the **Refresh** button to refresh the list.

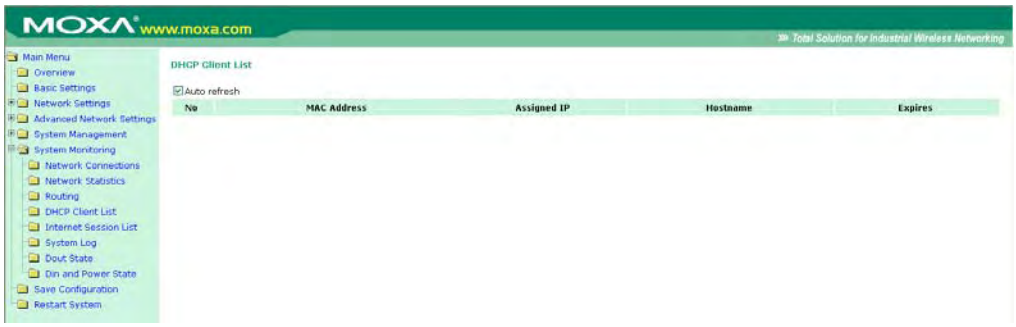


## Internet Sessions List

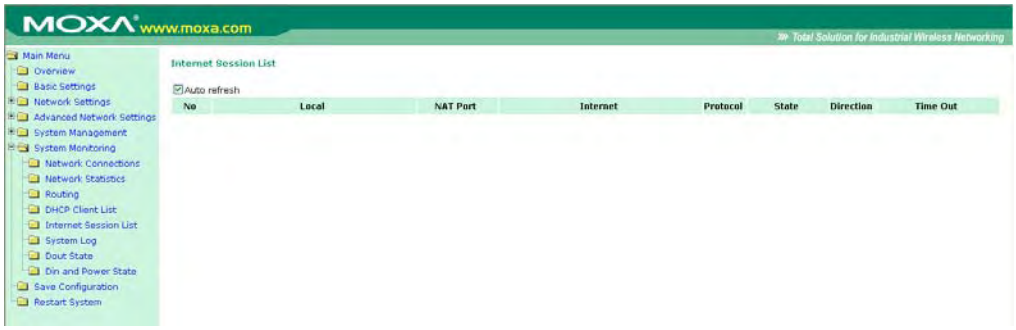


The Internet Sessions page displays full details of active Internet sessions through your router. An Internet session is a conversation between a program or application on a LAN-side computer and a program or application on a WAN-side computer/device.

## System Log

This option displays the system log. You may click **Select all** to select the entire log if you wish to copy and paste the contents into a text file.

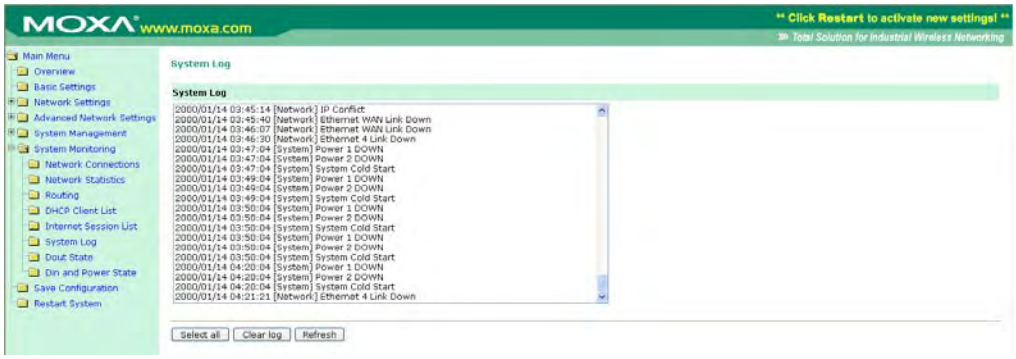
MOXA www.moxa.com
** Click Restart to activate new settings! **
Total Solution for Industrial Wireless Networking
Main Menu
Overview
Basic Settings
Network Settings
Advanced Network Settings
System Management
System Monitoring
Network Connections
Network Statistics
Routing
DHCP Client List
Internet Session List
System Log
Dout State
Din and Power State
Save Configuration
Restart System
System Log
System Log
2000/01/14 03:45:14 [Network] IP Conflict
2000/01/14 03:45:40 [Network] Ethernet WAN Link Down
2000/01/14 03:46:07 [Network] Ethernet WAN Link Down
2000/01/14 03:46:30 [Network] Ethernet 4 Link Down
2000/01/14 03:47:04 [System] Power 1 DOWN
2000/01/14 03:47:04 [System] Power 2 DOWN
2000/01/14 03:47:04 [System] System Cold Start
2000/01/14 03:49:04 [System] Power 1 DOWN
2000/01/14 03:49:04 [System] Power 2 DOWN
2000/01/14 03:49:04 [System] System Cold Start
2000/01/14 03:50:04 [System] Power 1 DOWN
2000/01/14 03:50:04 [System] Power 2 DOWN
2000/01/14 03:50:04 [System] System Cold Start
2000/01/14 03:50:04 [System] Power 1 DOWN
2000/01/14 03:50:04 [System] Power 2 DOWN
2000/01/14 03:50:04 [System] System Cold Start
2000/01/14 04:20:04 [System] Power 1 DOWN
2000/01/14 04:20:04 [System] Power 2 DOWN
2000/01/14 04:20:04 [System] System Cold Start
2000/01/14 04:21:21 [Network] Ethernet 4 Link Down
Select all
Clear log
Refresh

## Dout State

Dout State refers to the relay output status, which can be configured to change upon the occurrence of certain system events through **Auto Warning Settings** under **System Management**. Click **Dout State** under **System Monitoring** to display a list of events that may cause a change to the Dout state. If a configured alarm event occurs, the Dout state changes, and you can refer to this screen to determine the specific cause for the alarm. To reset the Dout state, click on Acknowledge Event.

## Din and Power Status

Go to **Din and Power status** under **System Monitoring** to display the power and digital input information.

# Save Configuration

Go to **Save Configuration** and then click **Save** to save your submitted configuration changes to the OnCell 5004/5104's flash memory. The configuration changes will be effective when the OnCell 5004/5104 is restarted. If you do not save your changes before restarting, they will be discarded.

MOXA www.moxa.com
** Click Restart to activate new settings! **
Total Solution for Industrial Wireless Networking
Main Menu
Overview
Basic Settings
Network Settings
Advanced Network Settings
System Management
System Monitoring
Save Configuration
Restart System
Save Configuration
If you have submitted any configuration changes, you must save the changes and restart the server before they take effect. Click Save to save the changes in the OnCell 5104's memory.
To restart the server, go to Restart System in the navigation panel.
Save

# Restart

## Restart System

Go to **Restart System** under **Restart** and then click **Restart** to restart the OnCell G3100. Ensure that you save all of your configuration changes before you restart the system or else these changes will be lost.

MOXA www.moxa.com
Total Solution for Industrial Wireless Networking
Main Menu
Overview
Basic Settings
Network Settings
Advanced Network Settings
System Management
System Monitoring
Save Configuration
Restart System
Restart System
!!! Warning !!!
Clicking Restart will disconnect all serial and Ethernet connections and reboot the OnCell 5104 server.
NOTE: Unsaved configuration changes will be discarded, and data currently in the middle of transmission may be lost.
Restart

# 6

# OnCell Search Utility

This chapter covers the following topics:

- **Installing Search Utility**
- **Configuring OnCell Search Utility**

# Installing Search Utility

1. Click the **INSTALL UTILITY** button in the OnCell Installation CD auto-run window to install OnCell Search Utility. Once the program starts running, click **Yes** to proceed.
2. Click **Next** when the Welcome screen opens to proceed with the installation.

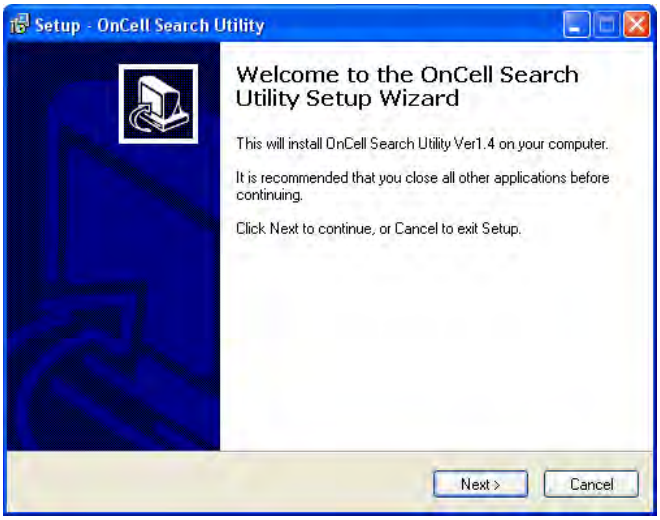
Setup - OnCell Search Utility
Welcome to the OnCell Search Utility Setup Wizard
This will install OnCell Search Utility Ver1.4 on your computer.
It is recommended that you close all other applications before continuing.
Click Next to continue, or Cancel to exit Setup.
Next >
Cancel

3. Click **Next** to install program files to the default directory, or click **Browse** to select an alternate location.

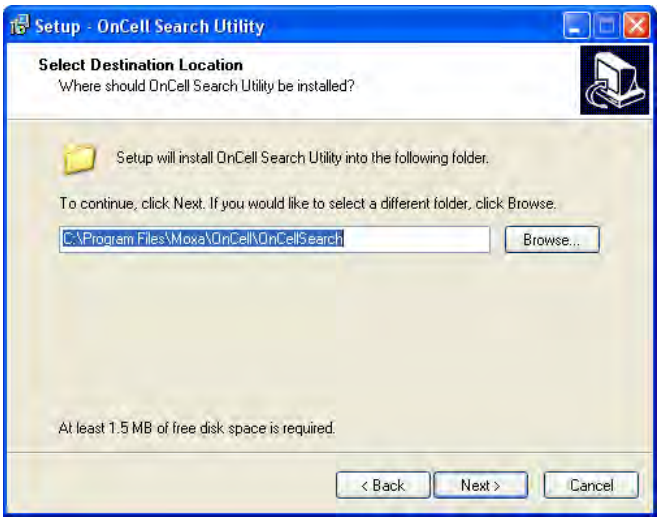
Setup - OnCell Search Utility
Select Destination Location
Where should OnCell Search Utility be installed?
Setup will install OnCell Search Utility into the following folder.
To continue, click Next. If you would like to select a different folder, click Browse.
C:\Program Files\Moxa\OnCell\OnCellSearch
Browse...
At least 1.5 MB of free disk space is required.
< Back
Next >
Cancel

4. Click **Next** to select additional tasks.

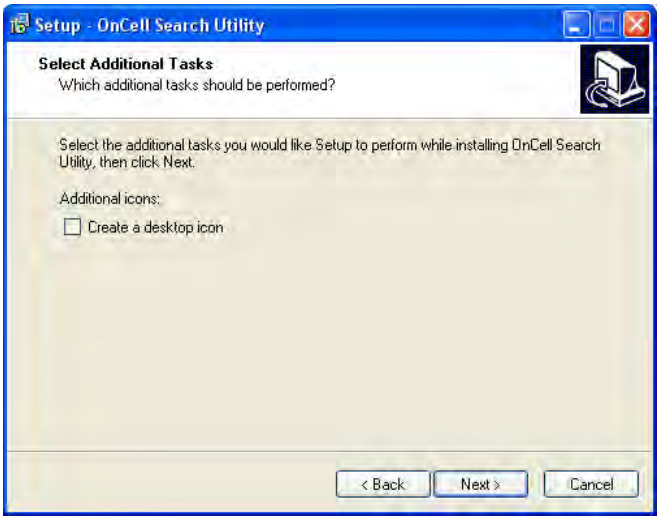
Setup - OnCell Search Utility
Select Additional Tasks
Which additional tasks should be performed?
Select the additional tasks you would like Setup to perform while installing OnCell Search Utility, then click Next.
Additional icons:
Create a desktop icon
< Back
Next >
Cancel

5. Click **Next** to proceed with the installation. The installer then displays a summary of the installation options.

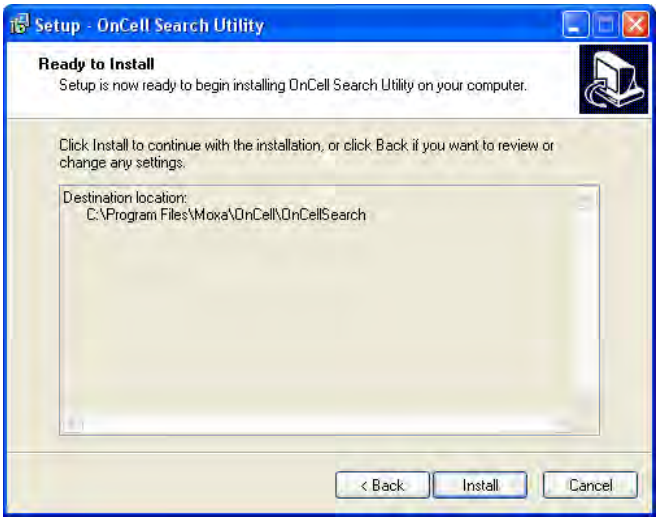
Setup - OnCell Search Utility
Ready to Install
Setup is now ready to begin installing OnCell Search Utility on your computer.
Click Install to continue with the installation, or click Back if you want to review or change any settings.
Destination location:
C:\Program Files\Moxa\OnCell\OnCellSearch
< Back
Install
Cancel

6. Click **Install** to begin the installation. The setup window will report the progress of the installation. To change the installation settings, click **Back** and navigate to the previous screen.

7. Click **Finish** to complete the installation of OnCell Search Utility.

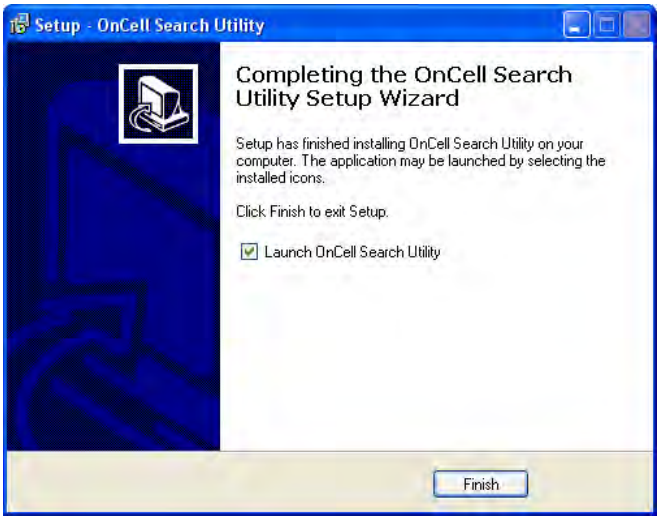
Setup - OnCell Search Utility
Completing the OnCell Search Utility Setup Wizard
Setup has finished installing OnCell Search Utility on your computer. The application may be launched by selecting the installed icons.
Click Finish to exit Setup.
Launch OnCell Search Utility
Finish

# Configuring OnCell Search Utility

The Broadcast Search function is used to locate all OnCell 5004/5104 servers that are connected to the same LAN as your computer. After locating an OnCell 5004/5104, you will be able to change its IP address.

Since the Broadcast Search function searches by MAC address and not IP address, all OnCell 5004/5104 servers connected to the LAN will be located, regardless of whether or not they are part of the same subnet as the host.

1. Open OnCell Search Utility and then click the **Search** icon.

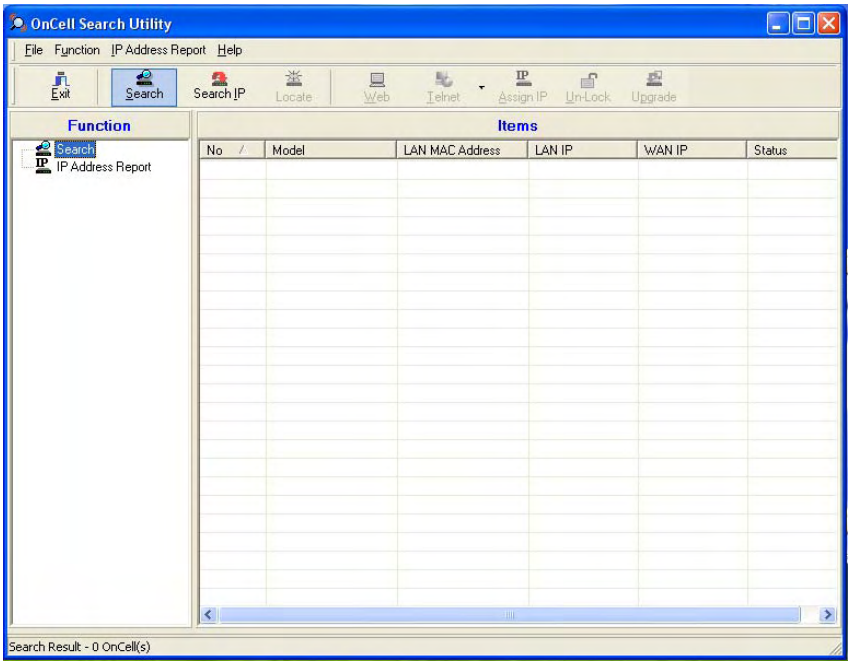


The Searching window indicates the progress of the search.

2. When the search is complete, all OnCell 5004/5104 servers that were located will be displayed in the OnCell Search Utility window.

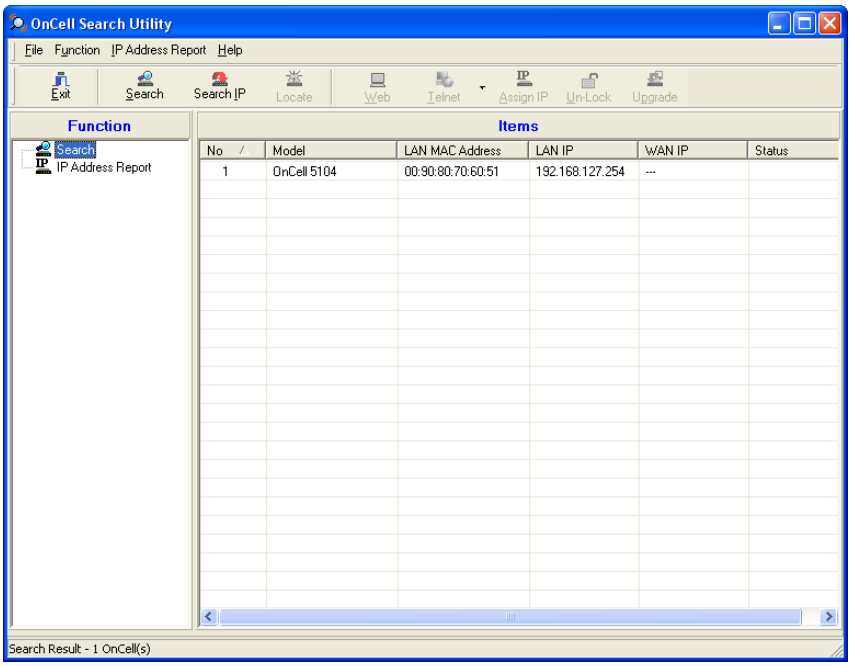
OnCell Search Utility
File Function IP Address Report Help
Exit Search Search IP Locate Web Telnet Assign IP Un-Lock Upgrade
Function
Search
IP Address Report
Items
No / Model LAN MAC Address LAN IP WAN IP Status
1 OnCell 5104 00:90:80:70:60:51 192.168.127.254 ---
Search Result - 1 OnCell(s)

Click **Locate** to cause the selected device to beep.

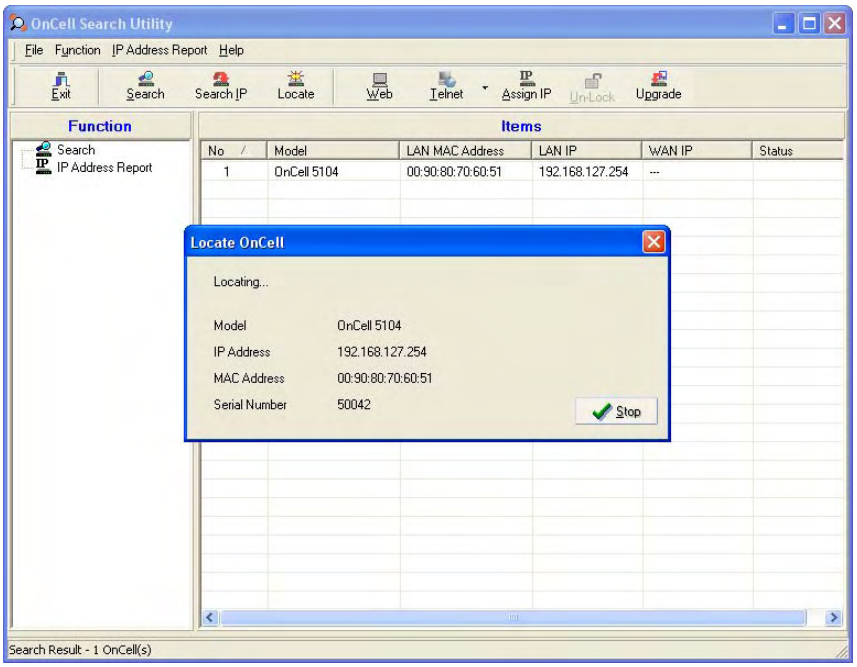


To modify the configuration of the highlighted OnCell 5004/5104, click on the Console icon to open the web console. This will take you to the web console, where you can make all configuration changes. Please refer to Chapter 4, *Using the Web Console*, for information on how to use the web console.

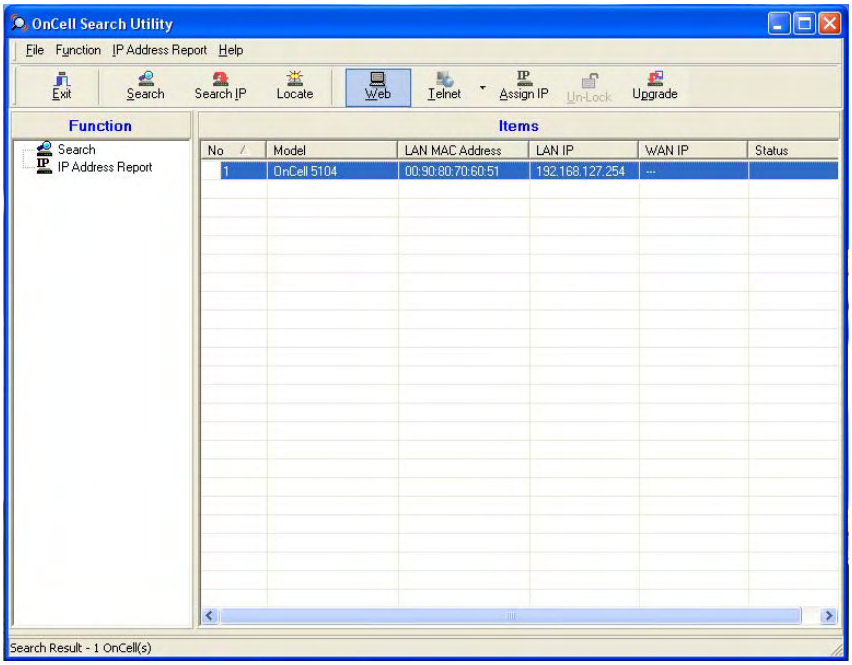
OnCell Search Utility
File Function IP Address Report Help
Exit Search Search IP Locate Web Telnet Assign IP Un-Lock Upgrade
Function
Search
IP Address Report
Items
No / Model LAN MAC Address LAN IP WAN IP Status
1 OnCell 5104 00:90:80:70:60:51 192.168.127.254 ---
Search Result - 1 OnCell(s)

3. Select **IP Address** Report for monitoring the status of IP Address, and click **Go**.

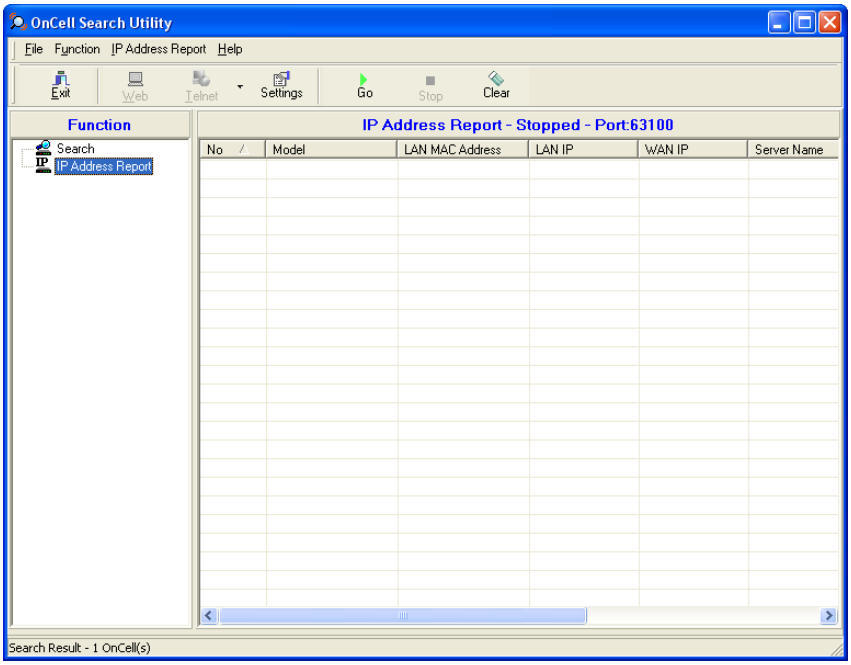
OnCell Search Utility
File Function IP Address Report Help
Exit Web Telnet Settings Go Stop Clear
Function
Search
IP Address Report
IP Address Report - Stopped - Port:63100
No / Model LAN MAC Address LAN IP WAN IP Server Name
Search Result - 1 OnCell(s)

4. To change the configuration of the IP Address Report, click on the **Settings** icon to open the IP Location Settings. The Local UDP listen Port number should match the web console Auto IP Report Settings' port number.

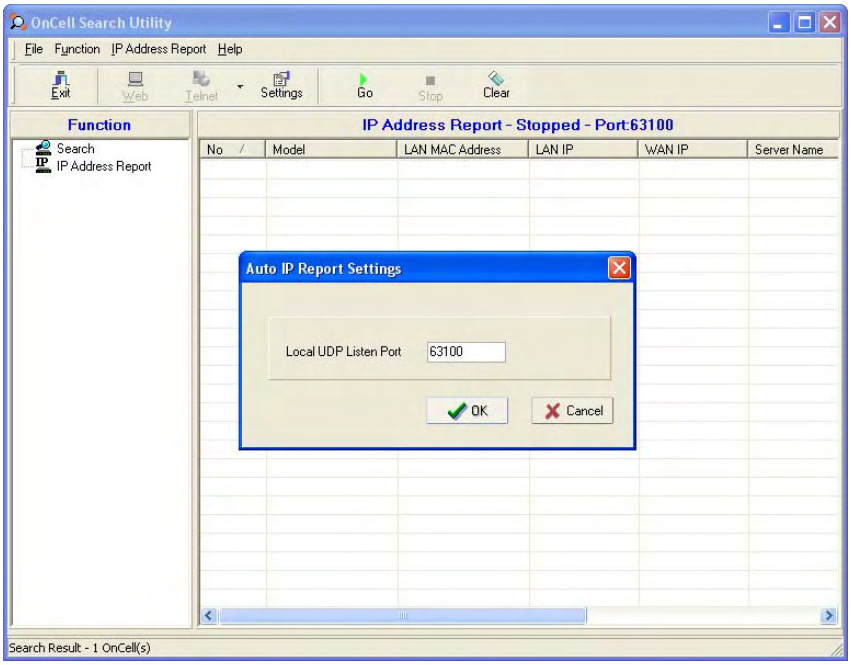
OnCell Search Utility
File Function IP Address Report Help
Exit Web Telnet Settings Go Stop Clear
Function
Search
IP Address Report
IP Address Report - Stopped - Port:63100
No / Model LAN MAC Address LAN IP WAN IP Server Name
Auto IP Report Settings
Local UDP Listen Port 63100
OK Cancel
Search Result - 1 OnCell(s)

5. Click the **Go** icon to complete the configuration. Please refer to Chapter 4, *Using the Web Console*, for information on how to use the IP Address Report.

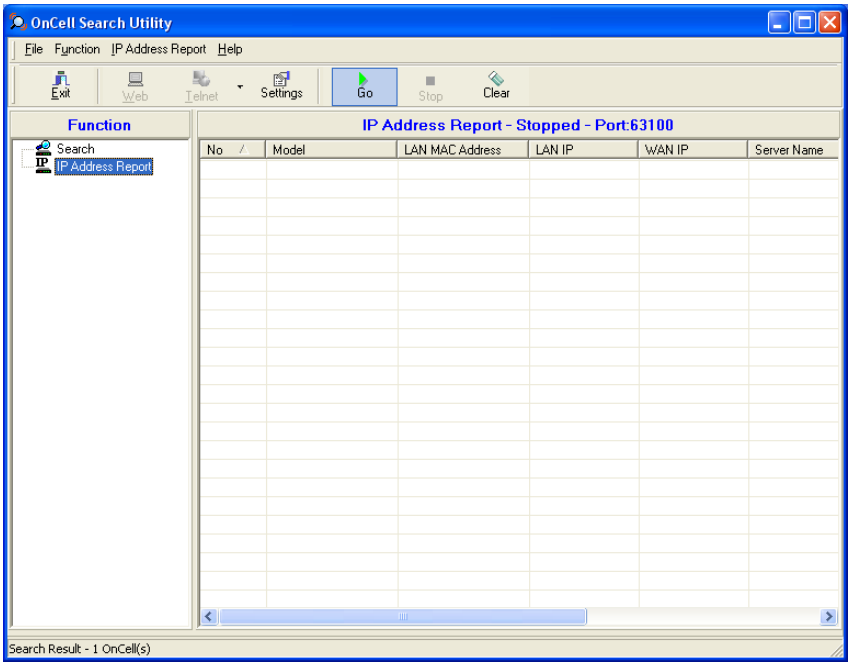
OnCell Search Utility
File Function IP Address Report Help
Exit Web Telnet Settings Go Stop Clear
Function
Search
IP Address Report
IP Address Report - Stopped - Port:63100
No / Model LAN MAC Address LAN IP WAN IP Server Name
Search Result - 1 OnCell(s)

# A

# Default Settings

| Setting Name | Default Name |
|---|---|
| **Web Console Login** | |
| Username | admin |
| Password | Keep <blank> |
| **Network Settings** | |
| LAN IP address | 192.168.127.254 |
| WAN IP address | 192.168.126.254 |
| Network | 255.255.255.0 |
| WAN Preference | Cellular |
| **Cellular Settings** | |
| SIM PIN | <blank> |
| NAT service | Enable |
| **DHCP Service Settings** | |
| DHCP Server | Enable |
| DNS relay | Enable |
| **Virtual Server Settings** | |
| Virtual Server | Disable |
| **Route Table** | |
| Route | Disable |
| **WAN IP Filter Configuration** | |
| WAN IP Filter | Disable |